



ISO/IEC 29341-9-13

Edition 1.0 2008-11

INTERNATIONAL STANDARD

**Information technology – UPnP Device Architecture –
Part 9-13: Imaging Device Control Protocol – Scan Service**



THIS PUBLICATION IS COPYRIGHT PROTECTED
Copyright © 2008 ISO/IEC, Geneva, Switzerland

All rights reserved. Unless otherwise specified, no part of this publication may be reproduced or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without permission in writing from either IEC or IEC's member National Committee in the country of the requester.

If you have any questions about ISO/IEC copyright or have an enquiry about obtaining additional rights to this publication, please contact the address below or your local IEC member National Committee for further information.

IEC Central Office
3, rue de Varembe
CH-1211 Geneva 20
Switzerland
Email: inmail@iec.ch
Web: www.iec.ch

About the IEC

The International Electrotechnical Commission (IEC) is the leading global organization that prepares and publishes International Standards for all electrical, electronic and related technologies.

About IEC publications

The technical content of IEC publications is kept under constant review by the IEC. Please make sure that you have the latest edition, a corrigenda or an amendment might have been published.

- Catalogue of IEC publications: www.iec.ch/searchpub

The IEC on-line Catalogue enables you to search by a variety of criteria (reference number, text, technical committee,...). It also gives information on projects, withdrawn and replaced publications.

- IEC Just Published: www.iec.ch/online_news/justpub

Stay up to date on all new IEC publications. Just Published details twice a month all new publications released. Available on-line and also by email.

- Electropedia: www.electropedia.org

The world's leading online dictionary of electronic and electrical terms containing more than 20 000 terms and definitions in English and French, with equivalent terms in additional languages. Also known as the International Electrotechnical Vocabulary online.

- Customer Service Centre: www.iec.ch/webstore/custserv

If you wish to give us your feedback on this publication or need further assistance, please visit the Customer Service Centre FAQ or contact us:

Email: csc@iec.ch
Tel.: +41 22 919 02 11
Fax: +41 22 919 03 00



ISO/IEC 29341-9-13

Edition 1.0 2008-11

INTERNATIONAL STANDARD

**Information technology – UPnP Device Architecture –
Part 9-13: Imaging Device Control Protocol – Scan Service**

INTERNATIONAL
ELECTROTECHNICAL
COMMISSION

PRICE CODE

S

ICS 35.200

ISBN 2-8318-1011-41

CONTENTS

| | |
|---|-----------|
| FOREWORD | 5 |
| ORIGINAL UPNP DOCUMENTS (informative) | 7 |
| 1 Overview and Scope | 9 |
| 2 Service Modeling Definitions | 10 |
| 2.1 ServiceType | 10 |
| 2.2 State Variables | 10 |
| 2.2.1 <u>JobName</u> | 11 |
| 2.2.2 <u>FailureCode</u> | 11 |
| 2.2.3 <u>State</u> | 12 |
| 2.2.4 <u>StateReason</u> | 12 |
| 2.2.5 <u>ImageFormat</u> | 12 |
| 2.2.6 <u>CompressionFactor</u> | 12 |
| 2.2.7 <u>ImageType</u> | 12 |
| 2.2.8 <u>Color Type and BitDepth</u> | 13 |
| 2.2.9 <u>ColorSpace</u> | 14 |
| 2.2.10 <u>UseFeeder</u> | 14 |
| 2.2.11 <u>BaseName</u> | 14 |
| 2.2.12 <u>AppendSideNumber</u> | 14 |
| 2.2.13 <u>SideCount</u> | 15 |
| 2.2.14 <u>SideNumber</u> | 15 |
| 2.2.15 <u>Destination</u> | 15 |
| 2.2.16 <u>Resolution</u> | 15 |
| 2.2.17 <u>ScanLength</u> | 15 |
| 2.2.18 <u>DeviceID</u> | 16 |
| 2.2.19 <u>HeightLimit, WidthLimit, XValueLimit, YValueLimit</u> | 16 |
| 2.2.20 <u>Timeout</u> | 17 |
| 2.2.21 <u>ErrorTimeout</u> | 17 |
| 2.2.22 RegistrationID | 17 |
| 2.2.23 JobID | 18 |
| 2.2.24 DestinationID | 18 |
| 2.3 Eventing and Moderation | 19 |
| 2.4 Action Set | 20 |
| 2.4.1 (Void) StartScan(RegistrationIDIn, UseFeederIn, SideCountIn, JobNameIn, ResolutionIn, ImageXOffsetIn, ImageYOffsetIn, ImageWidthIn, ImageHeightIn, ImageFormatIn, CompressionFactorIn, ImageTypeIn, ColorTypeIn, BitDepthIn, ColorSpaceIn, BaseNameIn, AppendSideNumberIn, TimeoutIn, ActualTimeoutOut, JobIDOut, ActualWidthOut, ActualHeightOut) | 21 |
| 2.4.2 (Void) Start(JobIDIn, UseFeederIn, SideCountIn) | 22 |
| 2.4.3 (Void) Stop(JobIDIn) | 23 |
| 2.4.4 (Void) Abort(JobIDIn) | 23 |
| 2.4.5 (Void) SetConfiguration(JobIDIn, JobNameIn, ResolutionIn, ImageXOffsetIn, ImageYOffsetIn, ImageWidthIn, ImageHeightIn, ImageFormatIn, CompressionFactorIn, ImageTypeIn, ColorTypeIn, BitDepthIn, ColorSpaceIn, BaseNameIn, AppendSideNumberIn, TimeoutIn, ActualTimeoutOut, ActualWidthOut, ActualHeightOut) | 24 |
| 2.4.6 (Void) GetConfiguration(JobNameOut, ResolutionOut, ImageXOffsetOut, ImageYOffsetOut, ImageWidthOut, ImageHeightOut, ImageFormatOut, CompressionFactorOut, ImageTypeOut, ColorTypeOut, BitDepthOut, ColorSpaceOut, BaseNameOut, AppendSideNumberOut, TimeoutOut) | 26 |
| 2.4.7 (Void) GetSideInformation(SideNumberOut, SideCountOut, ScanLengthOut) | 26 |
| 2.4.8 (Void) GetDestination(JobIDIn, DestinationOut, DestinationIDOut) | 27 |
| 2.4.9 (Void) GetState(StateOut, StateReasonOut, FailureCodeOut) | 27 |
| 2.4.10 Common Error Codes | 28 |
| 2.5 Theory of Operation | 29 |

| | | |
|----------------|--|-----------|
| 2.5.1 | <u>Sheet Size and Image Area</u> | 29 |
| 2.5.2 | Flow Example: Feeder-less, Button-less Scan Operation with Pull Image Transfer | 30 |
| 2.5.3 | Flow Example: Feeder-less Scan Operation with Pull Image Transfer | 31 |
| 2.5.4 | Flow Example: Feeder-less Scan Operation with Push Image Transfer | 31 |
| 2.5.5 | Flow Example: Scan Operation with Feeder and Pull Image Transfer | 32 |
| 2.5.6 | Flow Example: Scan Operation with Feeder and Push Image Transfer | 32 |
| 2.5.7 | Scanner Timeouts and Feeder Interactions | 33 |
| 2.5.8 | Scanner Buffer Functionality | 37 |
| 2.5.9 | Using XHTML-Print To Send An Image Directly To A Printer | 37 |
| 2.5.10 | BaseName, SideNumber, AppendSideNumber and Destination | 37 |
| 2.5.11 | Relationship between the Scan Service and the Feeder Service | 38 |
| 2.5.12 | Relationship between the Scan Service and the ExternalActivity Service | 39 |
| 2.5.13 | Extending Scanner Functionality | 39 |
| 3 | XML Service Template for <u>Scan:1.0</u> | 40 |
| 4 | Testing | 51 |
| 4.1 | Syntax Testing | 51 |
| 4.1.1 | Issues | 51 |
| 4.1.2 | <i>StartScan</i> Syntax Test | 51 |
| Annex A | (informative) Scan to Print using Multipart MIME | 52 |

LIST OF TABLES

| | |
|---|----|
| Table 1: State Variables | 10 |
| Table 1.1: allowedValueList for FailureCode | 11 |
| Table 1.2: allowedValueList for ImageFormat | 12 |
| Table 1.3: allowedValueList for ImageType..... | 13 |
| Table 1.4: allowedValueList for ColorType | 13 |
| Table 1.5: allowedValueList for BitDepth..... | 13 |
| Table 1.6: Common Pixel Description Values | 13 |
| Table 1.7: allowedValueList for ColorSpace..... | 14 |
| Table 1.8: allowedValueList for UseFeeder..... | 14 |
| Table 1.9: allowedValueList for BaseName..... | 14 |
| Table 1.10: allowedValueList for AppendSideNumber | 14 |
| Table 1.11: allowedValueRange for SideCount..... | 15 |
| Table 1.12: allowedValueList for SideNumber..... | 15 |
| Table 1.13: allowedValueList for Resolution..... | 15 |
| Table 1.14: allowedValueRange for ScanLength | 15 |
| Table 1.15: allowedValueRange for HeightLimit..... | 16 |
| Table 1.16: allowedValueRange for WidthLimit..... | 16 |
| Table 1.17: allowedValueRange for XValueLimit | 17 |
| Table 1.18: allowedValueRange for YValueLimit | 17 |
| Table 1.19: allowedValueRange for Timeout | 17 |
| Table 2: Event Moderation..... | 19 |
| Table 3: Actions | 20 |
| Table 4: Arguments for StartScan | 21 |
| Table 5: Arguments for Start | 22 |
| Table 6: Arguments for Stop..... | 23 |
| Table 7: Arguments for Abort | 23 |
| Table 8: Arguments for SetConfiguration | 24 |
| Table 9: Arguments for GetConfiguration..... | 26 |
| Table 10: Arguments for GetSideInformation | 26 |
| Table 11: Arguments for GetDestination | 27 |
| Table 12: Arguments for GetState..... | 27 |
| Table 13: Common Error Codes..... | 28 |
| Table 14: Sheet and Image Area Dimensions..... | 29 |
| Table 15: Scanner State Transition Table | 35 |
| Table 16: Current State vs Service Actions | 36 |
| Table 17: Destination Names | 38 |

INFORMATION TECHNOLOGY – UPNP DEVICE ARCHITECTURE –

Part 9-13: Imaging Device Control Protocol – Scan Service

FOREWORD

- 1) ISO (International Organization for Standardization) and IEC (International Electrotechnical Commission) form the specialized system for worldwide standardization. National bodies that are members of ISO or IEC participate in the development of International Standards. Their preparation is entrusted to technical committees; any ISO and IEC member body interested in the subject dealt with may participate in this preparatory work. International governmental and non-governmental organizations liaising with ISO and IEC also participate in this preparation.
- 2) In the field of information technology, ISO and IEC have established a joint technical committee, ISO/IEC JTC 1. Draft International Standards adopted by the joint technical committee are circulated to national bodies for voting. Publication as an International Standard requires approval by at least 75 % of the national bodies casting a vote.
- 3) The formal decisions or agreements of IEC and ISO on technical matters express, as nearly as possible, an international consensus of opinion on the relevant subjects since each technical committee has representation from all interested IEC and ISO member bodies.
- 4) IEC, ISO and ISO/IEC publications have the form of recommendations for international use and are accepted by IEC and ISO member bodies in that sense. While all reasonable efforts are made to ensure that the technical content of IEC, ISO and ISO/IEC publications is accurate, IEC or ISO cannot be held responsible for the way in which they are used or for any misinterpretation by any end user.
- 5) In order to promote international uniformity, IEC and ISO member bodies undertake to apply IEC, ISO and ISO/IEC publications transparently to the maximum extent possible in their national and regional publications. Any divergence between any ISO/IEC publication and the corresponding national or regional publication should be clearly indicated in the latter.
- 6) ISO and IEC provide no marking procedure to indicate their approval and cannot be rendered responsible for any equipment declared to be in conformity with an ISO/IEC publication.
- 7) All users should ensure that they have the latest edition of this publication.
- 8) No liability shall attach to IEC or ISO or its directors, employees, servants or agents including individual experts and members of their technical committees and IEC or ISO member bodies for any personal injury, property damage or other damage of any nature whatsoever, whether direct or indirect, or for costs (including legal fees) and expenses arising out of the publication of, use of, or reliance upon, this ISO/IEC publication or any other IEC, ISO or ISO/IEC publications.
- 9) Attention is drawn to the normative references cited in this publication. Use of the referenced publications is indispensable for the correct application of this publication.

IEC and ISO draw attention to the fact that it is claimed that compliance with this document may involve the use of patents as indicated below.

ISO and IEC take no position concerning the evidence, validity and scope of the putative patent rights. The holders of the putative patent rights have assured IEC and ISO that they are willing to negotiate free licences or licences under reasonable and non-discriminatory terms and conditions with applicants throughout the world. In this respect, the statements of the holders of the putative patent rights are registered with IEC and ISO.

Intel Corporation has informed IEC and ISO that it has patent applications or granted patents.

Information may be obtained from:

Intel Corporation
Standards Licensing Department
5200 NE Elam Young Parkway
MS: JFS-98
USA – Hillsboro, Oregon 97124

Microsoft Corporation has informed IEC and ISO that it has patent applications or granted patents as listed below:

6101499 / US; 6687755 / US; 6910068 / US; 7130895 / US; 6725281 / US; 7089307 / US; 7069312 / US;
10/783 524 / US

Information may be obtained from:

Microsoft Corporation
One Microsoft Way
USA – Redmond WA 98052

Philips International B.V. has informed IEC and ISO that it has patent applications or granted patents.

Information may be obtained from:

Philips International B.V. – IP&S
High Tech campus, building 44 3A21
NL – 5656 Eindhoven

NXP B.V. (NL) has informed IEC and ISO that it has patent applications or granted patents.

Information may be obtained from:

NXP B.V. (NL)
High Tech campus 60
NL – 5656 AG Eindhoven

Matsushita Electric Industrial Co. Ltd. has informed IEC and ISO that it has patent applications or granted patents.

Information may be obtained from:

Matsushita Electric Industrial Co. Ltd.
1-3-7 Shiromi, Chuoh-ku
JP – Osaka 540-6139

Hewlett Packard Company has informed IEC and ISO that it has patent applications or granted patents as listed below:

5 956 487 / US; 6 170 007 / US; 6 139 177 / US; 6 529 936 / US; 6 470 339 / US; 6 571 388 / US; 6 205 466 / US

Information may be obtained from:

Hewlett Packard Company
1501 Page Mill Road
USA – Palo Alto, CA 94304

Samsung Electronics Co. Ltd. has informed IEC and ISO that it has patent applications or granted patents.

Information may be obtained from:

Digital Media Business, Samsung Electronics Co. Ltd.
416 Maetan-3 Dong, Yeongtang-Gu,
KR – Suwon City 443-742

Attention is drawn to the possibility that some of the elements of this document may be the subject of patent rights other than those identified above. IEC and ISO shall not be held responsible for identifying any or all such patent rights.

ISO/IEC 29341-9-13 was prepared by UPnP Implementers Corporation and adopted, under the PAS procedure, by joint technical committee ISO/IEC JTC 1, *Information technology*, in parallel with its approval by national bodies of ISO and IEC.

The list of all currently available parts of the ISO/IEC 29341 series, under the general title *Universal plug and play (UPnP) architecture*, can be found on the IEC web site.

This International Standard has been approved by vote of the member bodies, and the voting results may be obtained from the address given on the second title page.

ORIGINAL UPnP DOCUMENTS (informative)

Reference may be made in this document to original UPnP documents. These references are retained in order to maintain consistency between the specifications as published by ISO/IEC and by UPnP Implementers Corporation. The following table indicates the original UPnP document titles and the corresponding part of ISO/IEC 29341:

| UPnP Document Title | ISO/IEC 29341 Part |
|---|---------------------|
| UPnP Device Architecture 1.0 | ISO/IEC 29341-1 |
| UPnP Basic:1 Device | ISO/IEC 29341-2 |
| UPnP AV Architecture:1 | ISO/IEC 29341-3-1 |
| UPnP MediaRenderer:1 Device | ISO/IEC 29341-3-2 |
| UPnP MediaServer:1 Device | ISO/IEC 29341-3-3 |
| UPnP AVTransport:1 Service | ISO/IEC 29341-3-10 |
| UPnP ConnectionManager:1 Service | ISO/IEC 29341-3-11 |
| UPnP ContentDirectory:1 Service | ISO/IEC 29341-3-12 |
| UPnP RenderingControl:1 Service | ISO/IEC 29341-3-13 |
| UPnP MediaRenderer:2 Device | ISO/IEC 29341-4-2 |
| UPnP MediaServer:2 Device | ISO/IEC 29341-4-3 |
| UPnP AV Datastructure Template:1 | ISO/IEC 29341-4-4 |
| UPnP AVTransport:2 Service | ISO/IEC 29341-4-10 |
| UPnP ConnectionManager:2 Service | ISO/IEC 29341-4-11 |
| UPnP ContentDirectory:2 Service | ISO/IEC 29341-4-12 |
| UPnP RenderingControl:2 Service | ISO/IEC 29341-4-13 |
| UPnP ScheduledRecording:1 | ISO/IEC 29341-4-14 |
| UPnP DigitalSecurityCamera:1 Device | ISO/IEC 29341-5-1 |
| UPnP DigitalSecurityCameraMotionImage:1 Service | ISO/IEC 29341-5-10 |
| UPnP DigitalSecurityCameraSettings:1 Service | ISO/IEC 29341-5-11 |
| UPnP DigitalSecurityCameraStillImage:1 Service | ISO/IEC 29341-5-12 |
| UPnP HVAC_System:1 Device | ISO/IEC 29341-6-1 |
| UPnP HVAC_ZoneThermostat:1 Device | ISO/IEC 29341-6-2 |
| UPnP ControlValve:1 Service | ISO/IEC 29341-6-10 |
| UPnP HVAC_FanOperatingMode:1 Service | ISO/IEC 29341-6-11 |
| UPnP FanSpeed:1 Service | ISO/IEC 29341-6-12 |
| UPnP HouseStatus:1 Service | ISO/IEC 29341-6-13 |
| UPnP HVAC_SetpointSchedule:1 Service | ISO/IEC 29341-6-14 |
| UPnP TemperatureSensor:1 Service | ISO/IEC 29341-6-15 |
| UPnP TemperatureSetpoint:1 Service | ISO/IEC 29341-6-16 |
| UPnP HVAC_UserOperatingMode:1 Service | ISO/IEC 29341-6-17 |
| UPnP BinaryLight:1 Device | ISO/IEC 29341-7-1 |
| UPnP DimmableLight:1 Device | ISO/IEC 29341-7-2 |
| UPnP Dimming:1 Service | ISO/IEC 29341-7-10 |
| UPnP SwitchPower:1 Service | ISO/IEC 29341-7-11 |
| UPnP InternetGatewayDevice:1 Device | ISO/IEC 29341-8-1 |
| UPnP LANDevice:1 Device | ISO/IEC 29341-8-2 |
| UPnP WANDevice:1 Device | ISO/IEC 29341-8-3 |
| UPnP WANConnectionDevice:1 Device | ISO/IEC 29341-8-4 |
| UPnP WLANAccessPointDevice:1 Device | ISO/IEC 29341-8-5 |
| UPnP LANHostConfigManagement:1 Service | ISO/IEC 29341-8-10 |
| UPnP Layer3Forwarding:1 Service | ISO/IEC 29341-8-11 |
| UPnP LinkAuthentication:1 Service | ISO/IEC 29341-8-12 |
| UPnP RadiusClient:1 Service | ISO/IEC 29341-8-13 |
| UPnP WANCableLinkConfig:1 Service | ISO/IEC 29341-8-14 |
| UPnP WANCommonInterfaceConfig:1 Service | ISO/IEC 29341-8-15 |
| UPnP WANDSLLinkConfig:1 Service | ISO/IEC 29341-8-16 |
| UPnP WANEthernetLinkConfig:1 Service | ISO/IEC 29341-8-17 |
| UPnP WANIPConnection:1 Service | ISO/IEC 29341-8-18 |
| UPnP WANPOTSLinkConfig:1 Service | ISO/IEC 29341-8-19 |
| UPnP WANPPPConnection:1 Service | ISO/IEC 29341-8-20 |
| UPnP WLANConfiguration:1 Service | ISO/IEC 29341-8-21 |
| UPnP Printer:1 Device | ISO/IEC 29341-9-1 |
| UPnP Scanner:1.0 Device | ISO/IEC 29341-9-2 |
| UPnP ExternalActivity:1 Service | ISO/IEC 29341-9-10 |
| UPnP Feeder:1.0 Service | ISO/IEC 29341-9-11 |
| UPnP PrintBasic:1 Service | ISO/IEC 29341-9-12 |
| UPnP Scan:1 Service | ISO/IEC 29341-9-13 |
| UPnP QoS Architecture:1.0 | ISO/IEC 29341-10-1 |
| UPnP QoSDevice:1 Service | ISO/IEC 29341-10-10 |
| UPnP QoSManager:1 Service | ISO/IEC 29341-10-11 |
| UPnP QoSPolicyHolder:1 Service | ISO/IEC 29341-10-12 |
| UPnP QoS Architecture:2 | ISO/IEC 29341-11-1 |
| UPnP QOS v2 Schema Files | ISO/IEC 29341-11-2 |

| UPnP Document Title | ISO/IEC 29341 Part |
|------------------------------------|---------------------------|
| UPnP QosDevice:2 Service | ISO/IEC 29341-11-10 |
| UPnP QosManager:2 Service | ISO/IEC 29341-11-11 |
| UPnP QosPolicyHolder:2 Service | ISO/IEC 29341-11-12 |
| UPnP RemoteUIClientDevice:1 Device | ISO/IEC 29341-12-1 |
| UPnP RemoteUIServerDevice:1 Device | ISO/IEC 29341-12-2 |
| UPnP RemoteUIClient:1 Service | ISO/IEC 29341-12-10 |
| UPnP RemoteUIServer:1 Service | ISO/IEC 29341-12-11 |
| UPnP DeviceSecurity:1 Service | ISO/IEC 29341-13-10 |
| UPnP SecurityConsole:1 Service | ISO/IEC 29341-13-11 |

1 Overview and Scope

This service definition is compliant with the UPnP Device Architecture version 1.0.

The Scan service represents the scan functionality of a scanner device. A control point may use this service to initiate a scan operation and receive images that represent the document in the scanner. The control point may pull the images using HTTP/GETs from the Destination URL or the service map push the images using HTTP/POSTs. The service has the following basic functional areas:

Operation Functionality

The *StartScan*, *Start*, *Stop*, *Abort* and *SetConfiguration* actions are used to control the action of the scan service.

Status Functionality

The *GetConfiguration*, *GetSideInformation*, *GetDestination* and *GetState* actions are used to query the current state of the scan service.

This service template does not address:

- *Faxing or Copying*

2 Service Modeling Definitions

2.1 ServiceType

A service that is compliant with this template is identified with the following service type: **urn:schemas-upnp-org:service:Scan:1**

2.2 State Variables

Table 1: State Variables

| Variable Name | Req. or Opt. ¹ | Data Type | Allowed Value ² | Default Value ² | Eng. Units |
|-------------------|---------------------------|-----------|--|----------------------------|------------|
| JobName | R | string | [device-setting ...] | "" | |
| FailureCode | R | string | [No Error Jammed Timeout Reached ErredTimeout Reached Destination Not Reachable] | No Error | |
| State | R | string | [Idle Reserved NotReady Pending Scanning Finishing Erred] | Idle | |
| StateReason | R | string | | | |
| ImageFormat | R | string | [device-setting image/jpeg] | image/jpeg | |
| CompressionFactor | R | i4 | -1-100 | 100 | n/a |
| ImageType | R | string | [device-setting Mixed] | Mixed | |
| ColorType | R | string | [device-setting Color Mono] | Color | |
| BitDepth | R | string | [device-setting 8] | 8 | bits |
| ColorSpace | R | string | [device-setting sRGB] | sRGB | n/a |
| UseFeeder | R | string | [device-setting] | 0 (false) | n/a |
| BaseName | R | string | [device-setting buffer] | buffer | |
| AppendSideNumber | R | string | [device-setting[0] | 0 (false) | n/a |
| SideCount | R | i4 | [-1-1] | 0 | n/a |
| SideNumber | R | i4 | | 1 | n/a |
| Destination | R | string | | | |
| Timeout | R | i4 | [-1 0] | | seconds |
| ErrorTimeout | R | i4 | | vendor unique | seconds |
| Resolution | R | string | [device-setting] | | Pixels |

| Variable Name | Req. or Opt. ¹ | Data Type | Allowed Value ² | Default Value ² | Eng. Units |
|----------------|---------------------------|-----------|----------------------------|----------------------------|--------------|
| | | | | | Per Inch |
| ScanLength | R | i4 | 0 – vendor-defined | 0 | milli-inches |
| DeviceID | R | string | | | n/a |
| HeightLimit | R | i4 | | | milli-inches |
| WidthLimit | R | i4 | | | milli-inches |
| XValueLimit | R | i4 | -1-vendor-defined | vendor-defined | milli-inches |
| YValueLimit | R | i4 | -1-vendor-defined | vendor-defined | milli-inches |
| RegistrationID | R | ui4 | | | |
| JobID | R | ui4 | 1 – vendor-defined | | |
| DestinationID | R | ui4 | | 0 | |

¹ R = Required, O = Optional, X = Non-standard.

² Values listed in this column are required. To specify standard optional values or to delegate assignment of values to the vendor, you must reference a specific instance of an appropriate table below.

2.2.1 JobName

This string allows the client to give the job a unique name. This is informational only. It can be used to identify the client or the purpose of the job. If the value is set to *device-setting* in the SetConfiguration or StartScan actions, then the value should not be changed.

2.2.2 FailureCode

A Failure Code indicates a failure, or error, that does not occur as an immediate result of an action and cannot be reported as part of the action response. Error Codes that occur during the execution of an action are not listed as allowed values of the FailureCode unless they can occur outside of the boundary of the action.

Table 1.1: allowedValueList for FailureCode

| Value | Req. or Opt. |
|-----------------------------------|--------------|
| No Error | R |
| Jammed | R |
| Timeout Reached | R |
| ErredTimeout Reached | R |
| Destination not Reachable | R |
| ... (Vendor specific error codes) | O |

2.2.3 **State**

The current state of the scanner. The states are defined as follows:

- *Idle* – The scanner is not active
- *Reserved* – The scanner is reserved for use by a specific control point that has the correct RegistrationID. The RegistrationID value came from the ExternalActivity service.
- *NotReady* – The scanning is getting ready to scan.
- *Pending* - The scanner is currently processing a Scan job. It is waiting for client interaction (start action) or feeder interaction (loaded state) to complete
- *Scanning* – The scanner is currently scanning an image to the destination
- *Finishing* – The scanner has completed scanning all available sides and is waiting for the transfer of images to complete
- *Erred* – An error occurred during a scan operation. The scan service is waiting for the client to acknowledge the error by sending an Abort action.

2.2.4 **StateReason**

The StateReason string is used to augment the information given by the current state. This is especially helpful when in the NotReady state. In this case, the vendor should put information in this variable that tells the client what is going on (i.e. Calibrating, Warming Up, etc.).

2.2.5 **ImageFormat**

The format of the image to be returned. The list of allowed values may be a subset or superset of the given values. To send images to a printer, the application/vnd.pwg-xhtml-print format MUST be used with JPEG images embedded in an application/vnd.pwg-multiplexed document. See Using XHTML-Print To Send An Image Directly To A Printer on page 37 for more information about using the XHTML image type. If the value is set to *device-setting* in the SetConfiguration or StartScan actions, then the value should not be changed.

NOTE: the ImageFormat value “application/vnd.pwg-xhtml-print+xml” exceeds the recommended maximum length of 31 characters for elements of an allowedValueList. A truncated version (application/vnd.pwg-xhtml-print) is used so that it will fit within that length.

Table 1.2: allowedValueList for ImageFormat

| Value | Req. or Opt. | Filename Suffix |
|---|--------------|-----------------|
| device-setting | R | |
| image/jpeg | R | .jpg |
| application/vnd.pwg-xhtml-print (Scan-to-Print) | O | .xml |
| ... (vendor defined) | O | |

2.2.6 **CompressionFactor**

The measure of compression for compressed image formats. If the value is set to –1 (*device-setting*) in the SetConfiguration or StartScan actions, then the value should not be changed.

2.2.7 **ImageType**

The type of image to be scanned. If the value is set to *device-setting* in the SetConfiguration or StartScan actions, then the value should not be changed.

Table 1.3: allowedValueList for ImageType

| Value | Req. or Opt. |
|----------------|--------------|
| device-setting | R |
| Mixed | R |
| Photo | O |
| Text | O |
| Graphics | O |

2.2.8 Color Type and BitDepth

The type of the pixel used to represent the image is very dependent upon the ImageFormat. ColorType and BitDepth are used to describe the basic shape of the pixels. ColorType is used to describe whether the image is monochrome, color, or some sort of extended multi-plane pixel. The BitDepth value is used to describe the size of each part of a pixel. Since JPEG is the only required image format, the values for JPEG are given here. If vendors support additional image formats, then they should extend the allowed values to describe their formats (i.e. PNG-RGB-ALPHA, etc.).

Table 1.4: allowedValueList for ColorType

| Value | Req. or Opt. |
|----------------|--------------|
| device-setting | R |
| Color | O |
| Mono | O |

Note: Either *Color* or *Mono* should be given as an allowed value. Both are allowed, but at least one of them is required. The allowed value list can be extended or a subset of the list given here.

Table 1.5: allowedValueList for BitDepth

| Value | Req. or Opt. |
|----------------|--------------|
| device-setting | R |
| 8 | R |
| 12 | O |

The allowed value list may be extended as required.

2.2.8.1 Common Pixel Description Values

The following examples show how to describe most JPEG variations:

Table 1.6: Common Pixel Description Values

| Description | ColorType | BitDepth |
|--------------------|---------------|----------|
| 8-bit Color JPEG | Color | 8 |
| 8-bit Gray | Mono | 8 |
| 12-bit Color | Color | 12 |
| PNG RGB with Alpha | PNG-RGB-ALPHA | 8 |

2.2.9 ColorSpace

The color space used to describe color images. This value is only valid if the *ColorType* value is *Color*. The allowed values may be a superset of the given values. If the value is set to *device-setting* in the SetConfiguration or StartScan actions, then the value should not be changed.

Table 1.7: allowedValueList for ColorSpace

| Value | Req. or Opt. |
|-------------------------------------|--------------|
| device-setting | R |
| sRGB (use ITU-BT.601 specification) | R |
| YCC | O |
| ... (vendor defined) | O |

2.2.10 UseFeeder

Indicates where the sheet for the scan should come from. See Relationship between the Scan Service and the Feeder Service on page 38 for more information on using the feeder. If the value is set to *device-setting* in the SetConfiguration or StartScan actions, then the value should not be changed. Either true (1) or false (0), or both, must be in the allowed value list. It is up to the vendor to specify which they support.

Table 1.8: allowedValueList for UseFeeder

| Value | Req. or Opt. |
|----------------|--------------|
| device-setting | R |
| 0 (false) | O |
| 1 (true) | O |

2.2.11 BaseName

The name, or URI, for the scanned image files. The values "*pull-relative*" and "*pull-absolute*" are reserved to indicate that the image should be buffered and the client should pull the image from the device. In this case, the *Destination* variable will contain the Image URL, either relative to the BaseURL or absolute. See BaseName, SideNumber, AppendSideNumber and Destination on page 37 for more information. If the value is set to *device-setting* in the SetConfiguration or StartScan actions, then the value should not be changed.

Table 1.9: allowedValueList for BaseName

| Value | Req. or Opt. |
|---------------------|--------------|
| device-setting | R |
| pull-relative | R |
| pull-absolute | R |
| ... (any valid URI) | O |

2.2.12 AppendSideNumber

If this value is true, then the side number will be appended to the Basename value to create the destination name (i.e. the destination name will change for each side). See BaseName, SideNumber, AppendSideNumber and Destination on page 37 for more information. If the value is set to *device-setting* in the SetConfiguration or StartScan actions, then the value should not be changed.

Table 1.10: allowedValueList for AppendSideNumber

| Value | Req. or Opt. |
|----------------|--------------|
| device-setting | R |
| 0 (false) | R |
| 1 (true) | O |

2.2.13 SideCount

The total number of sides remaining to be scanned in the current *Start* or *StartScan* action. This value is set by the *StartScan* and *Start* actions and decremented with each side scanned. A value of –1 means to scan all available sheets. A value of 0 means to scan no pages.

Table 1.11: allowedValueRange for SideCount

| Value | | Req. or Opt. |
|---------|---------------------------|--------------|
| Minimum | -1 | R |
| Maximum | VendorUnique (≥ 1) | R |
| Step | 1 | R |

2.2.14 SideNumber

The side-number for the current scanning session. The value is reset to 1 each time that the state enters *Idle*. This value is intended to indicate the capacity of a Feeder or other part of the scanner. It is not an error for the SideNumber to reach or exceed the maximum value. Instead, the value should simply wrap around to the minimum value. – Read-Only

Table 1.12: allowedValueList for SideNumber

| Value | | Req. or Opt. |
|---------|--------------|--------------|
| Minimum | 0 | R |
| Maximum | VendorUnique | R |
| Step | 1 | R |

2.2.15 Destination

The URL that the client should get. Otherwise, this is the name of the location where the device will put the image. This value is generated by the scanner service and cannot be set. See BaseName, SideNumber, AppendSideNumber and Destination on page 37 for more information.

2.2.16 Resolution

The resolution of the image in pixels per inch. The allowed values must be specified by the vendor.

Table 1.13: allowedValueList for Resolution

| Value | | Req. or Opt. |
|----------------|--|--------------|
| device-setting | | R |
| Vendor Unique | | R |

2.2.17 ScanLength

The *ScanLength* variable indicates the total length scanned, in milli-inches, on the current page. This value will be reset to 0 at the beginning of each sheet and will increase as the scan progresses. This variable is intended to serve as a progress indicator. If the control point knows the length of the sheet, then it can indicate progress in percentages. If a vendor does not support this type of indication, then this value should not change.

Table 1.14: allowedValueRange for ScanLength

| Value | | Req. or Opt. |
|---------|---------------------------|--------------|
| Minimum | 0 | R |
| Maximum | HeightLimit maximum value | R |
| Step | 1 | R |

2.2.18 DeviceID

The value of this variable **MUST** exactly match the IEEE 1284-2000 Device ID string, except the length field **MUST** not be specified.. The value is assigned by the Scanner vendor and **MUST NOT** be localized by the Scan Service.

The IEEE 1284-2000 Device ID is a length field followed by a case-sensitive string of ASCII characters defining peripheral characteristics and/or capabilities. For the purposes of this specification, the length bytes **MUST NOT** be included. The Device ID sequence is composed of a series of keys and values of the form:

key: value {,value} repeated for each key

As indicated, each key will have one value, and **MAY** have more than one value. The minimum necessary keys (case-sensitive) are MANUFACTURER, COMMAND SET, and MODEL. (These keys **MAY** be abbreviated as MFG, CMD, and MDL respectively.) Each implementation **MUST** supply these three keys and possibly additional ones as well. Each key (and each value) is a string of characters. Any characters except colon (:), comma (,), and semi-colon (;) **MAY** be included as part of the key (or value) string. Any leading or trailing white space (SPACE[x'20'], TAB[x'09'], VTAB[x'0B'], CR[x'0D'], NL[x'0A'], or FF[x'0C']) in the string is ignored by the parsing program (but is still counted as part of the overall length of the sequence).

An example ID String, showing optional comment and active command set keys and their associated values (the text is actually all on one line):

MANUFACTURER:ACME Manufacturing;

COMMAND SET:XHTML-Print+xml;

MODEL:Scanner 9;

COMMENT:Anything you like;

ACTIVE COMMAND SET:JPEG;

(See IEEE 1284-2000 clause 7.6)

Note: One of the purposes of the DeviceId variable is to select a scanner driver for those UCPs that need a scanner driver. The values of the COMMAND SET key are interpreted by the scanner driver provided by the vendor and so are vendor-defined, rather than being standardized.

2.2.19 HeightLimit, WidthLimit, XValueLimit, YValueLimit

The HeightLimit, WidthLimit, XValueLimit, and YValueLimit values are placeholders. Their values should be ignored. The allowedValueRanges in the Service Control Protocol Document (SCPD) are the values of interest. Those values should be used to set limits for the ImageXOffset, ImageYOffset, ImageHeight, and ImageWidth parameters in the SetConfiguration action.

These values are simply placeholders, or constant values. The intent is to specify the limits of these values in the SCPD. The actual values of these variables are not important and should be ignored.

Table 1.15: allowedValueRange for HeightLimit

| Value | | Req. or Opt. |
|---------|--------------|--------------|
| Minimum | -1 | R |
| Maximum | VendorUnique | R |
| Step | 1 | R |

Table 1.16: allowedValueRange for WidthLimit

| Value | | Req. or Opt. |
|---------|--------------|--------------|
| Minimum | -1 | R |
| Maximum | VendorUnique | R |
| Step | 1 | R |

Table 1.17: allowedValueRange for XValueLimit

| Value | | Req. or Opt. |
|---------|--------------|--------------|
| Minimum | -1 | R |
| Maximum | VendorUnique | R |
| Step | 1 | R |

Table 1.18: allowedValueRange for YValueLimit

| Value | | Req. or Opt. |
|---------|--------------|--------------|
| Minimum | -1 | R |
| Maximum | VendorUnique | R |
| Step | 1 | R |

2.2.20 Timeout

The inner-side timeout. If SideCount is zero, then the scanner will wait *Timeout* seconds in the Pending state. If the timeout expires, then the state will transition to Finishing. If the value is 0, then timeouts are disabled. If a parameter has a value of -1, then the device should not change the value of the timeout.

Table 1.19: allowedValueRange for Timeout

| Value | | Req. or Opt. |
|---------|--------------|--------------|
| Minimum | -1 | R |
| Maximum | VendorUnique | R |
| Step | 1 | R |
| Default | Maximum | O |

2.2.21 ErrorTimeout

The timeout used to exit the NotReady, Erred, and Finishing states. The scanner will wait *ErrorTimeout* seconds in any of these states. If the timeout expires, then the state will change from NotReady or Finishing to Erred, or from Erred to Idle. The value of this timeout is vendor unique and cannot be changed by the control point.

2.2.22 RegistrationID

The RegistrationID is a placeholder variable that is used to describe the RegistrationID argument from the StartScan action. This value is used to control the interaction between the Scanner service and the ExternalActivity service. If the current RegistrationID value is 0, then any value should be accepted and sent to the ExternalActivity service. If the current RegistrationID value is not 0, then only that value can be accepted. Any other value will cause an error. The RegistrationID value can be used to control the interactions in two ways.

- ExternalActivity Initiated Operation – The user presses a button associated with the scanner and the ExternalActivity service sets the required RegistrationID value using an unspecified internal mechanism. This reserves the scanner for use by a control point that can supply the required RegistrationID value. The reservation will last until a StartScan action is received with the required RegistrationID value or until a Timeout occurs. If a timeout occurs, then the required RegistrationID value will be set back to 0.

Control Point Initiated Operation – The user indicates that it wishes to perform a scan. The control point sends a *StartScan* operation with a valid RegistrationID value and typically with UseFeeder = false and SideCount = 0 (the scanner service will wait in Pending state). The scanner state changes as indicated in

- Figure 2. In addition, the Scanner service forwards the RegistrationID value to the ExternalActivity service using an unspecified internal mechanism. The ExternalActivity service is expected to indicate the registration values associated with the ID as far as it is capable. In this case, the user would walk to the scanner, place the document in the feeder, and press the appropriate button. The control point would see the activity and send a *Start* action to allow the scanner to continue its operation. For more information on the ExternalActivity service behavior, see the ExternalActivity Service Template document.

2.2.23 JobID

A JobID value is unique for the duration of the current job. It is used as an argument to all actions that change the state of the scanner to prevent accidental interference by a third party. The initial value is returned from the *StartScan* action and must be given in most action argument lists.

2.2.24 DestinationID

The Destination variable is used to indicate where an image should be pulled from or sent to. To prevent all UCPs from knowing the Destination value, the DestinationID value is used to indicate that the Destination value has been changed. This evented value is incremented each time that the Destination variable value is set to a new value. The UCP should use the GetDestination action to retrieve the Destination value as needed.

2.3 Eventing and Moderation

Table 2: Event Moderation

| Variable Name | Evented | Moderated Event? | Max Event Rate | Logical Combination | Min Delta per Event |
|-------------------|---------|------------------|---|---------------------|------------------------------------|
| | | | Determined by N Where Rate = (Event)/(N secs) | | (N) * (allowed ValueRange Step) |
| JobName | No | | | | |
| FailureCode | Yes | No | | | |
| State | Yes | No | | | |
| StateReason | No | | | | |
| ImageFormat | No | | | | |
| CompressionFactor | No | | | | |
| Imagetype | No | | | | |
| ColorType | No | | | | |
| BitDepth | No | | | | |
| ColorSpace | No | | | | |
| UseFeeder | No | | | | |
| BaseName | No | | | | |
| AppendSideNumber | No | | | | |
| SideCount | No | | | | |
| SideNumber | Yes | No | | | |
| Destination | No | | | | |
| Timeout | No | | | | |
| ErrorTimeout | No | | | | |
| Resolution | No | | | | |
| ScanLength | Yes | Yes | 1 | | |
| DeviceID | No | | | | |
| HeightLimit | No | | | | |
| WidthLimit | No | | | | |
| XValueLimit | No | | | | |
| YValueLimit | No | | | | |
| RegistrationID | No | | | | |
| JobID | No | | | | |
| DestinationID | Yes | No | | | |

See section 4.4 of the UPnP Device Architecture document for details regarding event moderation.

2.4 Action Set

Immediately following this table is detailed information about these actions, including short descriptions of the actions, the effects of the actions on state variables, and error codes defined by the actions.

Table 3: Actions

| Name | Req. or Opt. |
|--------------------|--------------|
| StartScan | R |
| Start | R |
| Stop | R |
| Abort | R |
| SetConfiguration | R |
| GetConfiguration | R |
| GetSideInformation | R |
| GetDestination | R |
| GetState | R |

2.4.1 (Void) StartScan(RegistrationIDIn, UseFeederIn, SideCountIn, JobNameIn, ResolutionIn, ImageXOffsetIn, ImageYOffsetIn, ImageWidthIn, ImageHeightIn, ImageFormatIn, CompressionFactorIn, ImageTypeIn, ColorTypeIn, BitDepthIn, ColorSpaceIn, BaseNameIn, AppendSideNumberIn, TimeoutIn, ActualTimeoutOut, JobIDOut, ActualWidthOut, ActualHeightOut)

2.4.1.1 Arguments

Table 4: Arguments for StartScan

| Argument | Direction | RelatedStateVariable |
|---------------------|-----------|----------------------|
| RegistrationIDIn | IN | RegistrationID |
| UseFeederIn | IN | UseFeeder |
| SideCountIn | IN | SideCount |
| JobNameIn | IN | JobName |
| ResolutionIn | IN | Resolution |
| ImageXOffsetIn | IN | XValueLimit |
| ImageYOffsetIn | IN | YValueLimit |
| ImageWidthIn | IN | WidthLimit |
| ImageHeightIn | IN | HeightLimit |
| ImageFormatIn | IN | ImageFormat |
| CompressionFactorIn | IN | CompressionFactor |
| ImageTypeIn | IN | ImageType |
| ColorTypeIn | IN | ColorType |
| BitDepthIn | IN | BitDepth |
| ColorSpaceIn | IN | ColorSpace |
| BaseNameIn | IN | BaseName |
| AppendSideNumberIn | IN | AppendSideNumber |
| TimeoutIn | IN | Timeout |
| ActualTimeoutOut | OUT | Timeout |
| JobIDOut | OUT | JobID |
| ActualWidthOut | OUT | WidthLimit |
| ActualHeightOut | OUT | HeightLimit |

2.4.1.2 Effect of Action on State

The RegistrationIDIn value is used to control the interaction between the Scan service and the ExternalActivity service. If the current RegistrationIDIn value is 0, then any valid value should be accepted and sent to the ExternalActivity service. If the current RegistrationIDIn value is not 0, then only that value can be accepted. Any other value must cause an error. The RegistrationIDIn value can be used to control the interactions in two ways.

- ExternalActivity Initiated Operation – The user presses a button associated with the scanner and the ExternalActivity service sets the required RegistrationIDIn value using an unspecified internal mechanism. This reserves the scanner for use by a control point that can supply the required RegistrationIDIn value. The reservation will last until a StartScan action is received with the required RegistrationIDIn value or until a Timeout occurs. If a timeout occurs, then the required RegistrationIDIn value will be set back to 0.

Control Point Initiated Operation – The user indicates that it wishes to perform a scan. The control point sends a StartScan operation with a valid RegistrationIDIn value and typically with UseFeeder = false and SideCount = 0 (the scanner service will wait in Pending state). The scanner state changes as indicated in

- Figure 2. In addition, the Scan service forwards the RegistrationIDIn value to the ExternalActivity service using an unspecified internal mechanism. The ExternalActivity service is expected to indicate the registration values associated with the ID as far as it is capable. In this case, the user would walk to the scanner, place the document in the feeder, and press the appropriate button. The control point would see the activity and send a *Start* action to allow the scanner to continue its operation. For more information on the ExternalActivity service behavior, see the ExternalActivity Service Template document.

If the RegistrationIDIn value is valid, then the configurations values are set as given and the scan is started (*See section 2.5.12 on page 39 for more information about the RegID*). This action can only be executed while the scanner is in *Idle* state. If the state is not *Idle*, then the action will be ignored and an *Action Failed (501)* error will be returned. All state variables will be validated before any are changed. If any variable is invalid, then no variables will be changed, and an *Invalid Arguments (402)* error will be returned. If the RegistrationIDIn value is invalid, then the action will be ignored and an *Invalid ID* error will be returned. See Table 16: Current State vs Service Actions on page 36 for details on the results of this action.

NOTE: The resulting values of ImageXOffsetIn, ImageYOffsetIn, ImageWidthIn and ImageHeightIn must combine to fit within the WidthLimit and HeightLimit limits. If the given values do not fit within these limits, then they will be limited to fit.

The value of ImageXOffsetIn + ImageWidthIn must be less than the maximum WidthLimit value. If it is not, then the ImageWidthIn value will be limited, or clipped. The actual value will be returned in ActualWidthOut argument. The value of ImageYOffsetIn + ImageHeightIn must also be less than the maximum HeightLimit value. If it is not, then the ImageHeightIn value will be limited. The actual ImageHeight value is returned in the ActualHeightOut argument.

The JobIDOut value returned must be used in all subsequent actions that change the State of the Scan Service. The algorithm used to generate a unique JobIDOut value is left to the vendor. A simple incrementing algorithm is not recommended because it is too predictable and easy to defeat.

The TimeoutIn value is only advisory. The Scan Service may change the value to an appropriate alternative. The actual timeout value is returned in the ActualTimeoutOut parameter.

The values of the ImageFormatIn, ColorTypeIn, and BitDepthIn are related. Not all file formats will support the same bit depths and color types. If the combination of these three variables are not supported, then an “*Invalid Image Specification*” (714) error will be returned.

NOTE: The scanner will automatically set the configuration to default values when the state returns to *Idle*.

2.4.1.3 Errors

| errorCode | errorDescription | Description |
|-----------|-----------------------------|--|
| 501 | Action Failed | The Start action can only be performed in the Idle state. |
| 711 | Jammed | A sheet has jammed in the scanner or feeder (if present) Clear the paper path and execute the Stop action. |
| 712 | Invalid_ID | The given ID value is invalid |
| 714 | Invalid Image Specification | The combination of ImageFormat, ColorType and BitDepth are not supported. |

2.4.2 (Void) Start(JobIDIn, UseFeederIn, SideCountIn)

2.4.2.1 Arguments

Table 5: Arguments for Start

| Argument | Direction | RelatedStateVariable |
|-------------|-----------|----------------------|
| JobIDIn | IN | JobID |
| UseFeederIn | IN | UseFeeder |
| SideCountIn | IN | SideCount |

2.4.2.2 Effect of Action on State

The UseFeeder, and SideCount variables are set. Initiate the scan of a *SideCount* sides. A SideCount value of 0 means to scan all available pages. See Table 16: Current State vs Service Actions on page 36 for details on the results of this action. This action must only be executed while the scanner is in the *Pending* state. If the state is not in *Pending* state, then the action will be ignored and an *Action Failed (501)* error will be returned. If the JobIDIn value is invalid, then the action will be ignored and an *Invalid_ID* error will be returned. Errors

| errorCode | errorDescription | Description |
|-----------|------------------|--|
| 501 | Action Failed | The Start action can only be performed in the Pending state. |
| 711 | Jammed | A sheet has jammed in the scanner or feeder (if present) Clear the paper path and execute the Stop action. |
| 712 | Invalid_ID | The given ID value is invalid |

2.4.3 (Void) Stop(JobIDIn)

2.4.3.1 Arguments

Table 6: Arguments for Stop

| Argument | Direction | RelatedStateVariable |
|----------|-----------|----------------------|
| JobIDIn | IN | JobID |

2.4.3.2 Effect on State

This is used to stop a pending scan operation. Any complete sides that have not been transferred will be transferred before the state returns to Idle. The state will be set to *Finishing*. See Table 16: Current State vs Service Actions on page 36 for more details on this action. This action must only be executed while the scanner is not in the *Erred* state. If the state is *Erred*, then the action will be ignored and an *Action Failed (501)* error will be returned. If the JobIDIn value is invalid, then the action will be ignored and an *Invalid_ID* error will be returned.

2.4.3.3 Errors

| errorCode | errorDescription | Description |
|-----------|------------------|---|
| 501 | Action Failed | The Stop action cannot be performed in the erred state. |
| 711 | Jammed | A sheet has jammed in the scanner or feeder (if present). Clear the paper path and execute the Stop action. |
| 712 | Invalid_ID | The given ID value is invalid |

2.4.4 (Void) Abort(JobIDIn)

2.4.4.1 Arguments

Table 7: Arguments for Abort

| Argument | Direction | RelatedStateVariable |
|----------|-----------|----------------------|
| JobIDIn | IN | JobID |

2.4.4.2 Effect on State

This is used to abort a pending scan operation. The value of State will be set to Idle. All pending data will be lost. If the *UseFeeder* variable is true (1) then the current page will be ejected, otherwise no page ejection will take place. See Table 16: Current State vs Service Actions on page 36 for more details on this action. If the JobIDIn value is invalid, then the action will be ignored and an *Invalid_ID* error will be returned.

2.4.4.3 Errors

| errorCode | errorDescription | Description |
|-----------|------------------|-------------------------------|
| 712 | Invalid_ID | The given ID value is invalid |

2.4.5 (Void) SetConfiguration(JobIDIn, JobNameIn, ResolutionIn, ImageXOffsetIn, ImageYOffsetIn, ImageWidthIn, ImageHeightIn, ImageFormatIn, CompressionFactorIn, ImageTypeIn, ColorTypeIn, BitDepthIn, ColorSpaceIn, BaseNameIn, AppendSideNumberIn, TimeoutIn, ActualTimeoutOut, ActualWidthOut, ActualHeightOut)

2.4.5.1 Arguments

Table 8: Arguments for SetConfiguration

| Action Specification | Direction | RelatedStateVariable |
|----------------------|-----------|----------------------|
| JobIDIn | IN | JobID |
| JobNameIn | IN | JobName |
| ResolutionIn | IN | Resolution |
| ImageXOffsetIn | IN | XValueLimit |
| ImageYOffsetIn | IN | YValueLimit |
| ImageWidthIn | IN | WidthLimit |
| ImageHeightIn | IN | HeightLimit |
| ImageFormatIn | IN | ImageFormat |
| CompressionFactorIn | IN | CompressionFactor |
| ImageTypeIn | IN | ImageType |
| ColorTypeIn | IN | ColorType |
| BitDepthIn | IN | BitDepth |
| ColorSpaceIn | IN | ColorSpace |
| BaseNameIn | IN | BaseName |
| AppendSideNumberIn | IN | AppendSideNumber |
| TimeoutIn | IN | Timeout |
| ActualTimeoutOut | OUT | Timeout |
| ActualWidthOut | OUT | WidthLimit |
| ActualHeightOut | OUT | HeightLimit |

2.4.5.2 Effect on State

The SetConfiguration action must only be executed when the state value is Pending. If the state is not Pending, then no variables will be changed and an *Action Failed (501)* error will be returned. All state variables will be validated before any are changed. If any variable is invalid, then no variables will be changed, and an *Invalid Arguments (402)* error will be returned. If the JobIDIn value is invalid, then the action will be ignored and an *Invalid_ID* error will be returned. The state variables will be set as requested if the state is acceptable and the values are all valid. The order of validation of variables is vendor specific. Table 16: Current State vs Service Actions on page 36 for more details on this action.

The value of ImageXOffsetIn + ImageWidthIn must be less than the maximum WidthLimit value. If it is not, then the ImageWidthIn value will be limited, or clipped. The actual value will be returned in ActualWidthOut argument. The value of ImageYOffsetIn + ImageHeightIn must also be less than the maximum HeightLimit value. If it is not, then the ImageHeightIn value will be limited. The actual ImageHeight value is returned in the ActualHeightOut argument.

The TimeoutIn value is only advisory. The Scan Service may change the value to an appropriate alternative. The actual timeout value is returned in the ActualTimeoutOut parameter.

The values of the ImageFormatIn, ColorTypeIn, and BitDepthIn are related. Not all file formats will support the same bit depths and color types. If the combination of these three variables are not supported, then an “*Invalid Image Specification*” (714) error will be returned.

NOTE: The scanner will automatically set the configuration to default values when the state returns to *Idle*.

2.4.5.3 Errors

| errorCode | errorDescription | Description |
|-----------|-----------------------------|---|
| 501 | Action Failed | The SetConfiguration action must only be performed in the Pending state. |
| 712 | Invalid_ID | The given ID value is invalid |
| 714 | Invalid Image Specification | The combination of ImageFormat, ColorType and BitDepth are not supported. |

2.4.6 (Void) GetConfiguration(JobNameOut, ResolutionOut, ImageXOffsetOut, ImageYOffsetOut, ImageWidthOut, ImageHeightOut, ImageFormatOut, CompressionFactorOut, ImageTypeOut, ColorTypeOut, BitDepthOut, ColorSpaceOut, BaseNameOut, AppendSideNumberOut, TimeoutOut)

2.4.6.1 Arguments

Table 9: Arguments for GetConfiguration

| Argument | Direction | relatedStateVariable |
|----------------------|-----------|----------------------|
| JobNameOut | OUT | JobName |
| ResolutionOut | OUT | Resolution |
| ImageXOffsetOut | OUT | XValueLimit |
| ImageYOffsetOut | OUT | YValueLimit |
| ImageWidthOut | OUT | WidthLimit |
| ImageHeightOut | OUT | HeightLimit |
| ImageFormatOut | OUT | ImageFormat |
| CompressionFactorOut | OUT | CompressionFactor |
| ImageTypeOut | OUT | ImageType |
| ColorTypeOut | OUT | ColorType |
| BitDepthOut | OUT | BitDepth |
| ColorSpaceOut | OUT | ColorSpace |
| BaseNameOut | OUT | BaseName |
| AppendSideNumberOut | OUT | AppendSideNumber |
| TimeoutOut | OUT | Timeout |

2.4.6.2 Effects on State

None.

This action returns the current values of all of the state variables for scanning.

2.4.7 (Void) GetSideInformation(SideNumberOut, SideCountOut, ScanLengthOut)

2.4.7.1 Arguments

Table 10: Arguments for GetSideInformation

| Action Specification | Direction | relatedStateVariable |
|----------------------|-----------|----------------------|
| SideNumberOut | OUT | SideNumber |
| SideCountOut | OUT | SideCount |
| ScanLengthOut | OUT | ScanLength |

2.4.7.2 Effect on State

None

2.4.8 (Void) GetDestination(JobIDIn, DestinationOut, DestinationIDOut)

2.4.8.1 Arguments

Table 11: Arguments for GetDestination

| Action Specification | Direction | relatedStateVariable |
|----------------------|-----------|----------------------|
| JobIDIn | IN | JobID |
| DestinationOut | OUT | Destination |
| DestinationIDOut | OUT | DestinationID |

2.4.8.2 Effect on State

None

The value of the *Destination* variable is generated based on the values of *BaseName*, *AppendSideNumber*, and *SideCount*. See *BaseName*, *SideNumber*, *AppendSideNumber* and *Destination* on page 37 for more details. The *DestinationID* value is incremented each time that *Destination* is changed.

2.4.8.3 Errors

| errorCode | errorDescription | Description |
|-----------|------------------|-------------------------------|
| 712 | Invalid_ID | The given ID value is invalid |

2.4.9 (Void) GetState(StateOut, StateReasonOut, FailureCodeOut)

2.4.9.1 Arguments

Table 12: Arguments for GetState

| Action Specification | | RelatedStateVariable |
|----------------------|-----|----------------------|
| StateOut | OUT | State |
| StateReasonOut | OUT | StateReason |
| FailureCodeOut | OUT | FailureCode |

2.4.9.2 Effect on State

None

2.4.10 Common Error Codes

Table 13: Common Error Codes

| errorCode | errorDescription | Description |
|--------------------------------------|--|---|
| 401 | Invalid Action | See UPnP Device Architecture section on Control. |
| 402 | Invalid Args | See UPnP Device Architecture section on Control. |
| 501 | Action Failed | See UPnP Device Architecture section on Control. |
| 600 | Argument Value Invalid | The argument value is invalid. |
| 601 | Argument Value Out of Range | An argument value is less than the minimum or more than the maximum value of the allowedValueRange , or is not in the allowedValueList . |
| 602 | Optional Action Not Implemented | The requested action is optional and is not implemented by the device. |
| 603 | Out of Memory | The device does not have sufficient memory available to complete the action. This may be a temporary condition; the control point may choose to retry the unmodified request again later and it may succeed if memory is available. |
| <u>604</u> <u>Proposed</u> | <u>Human Intervention</u> <u>Required</u> | <u>The device has encountered an error condition which it cannot resolve itself and requires human intervention such as a reset or power cycle. See the device display or documentation for further guidance.</u> |

For more information regarding Common Error Codes, see section 3.2 of the UPnP Device Architecture Document.

2.5 Theory of Operation

2.5.1 Sheet Size and Image Area

The sheet size is defined by the limits of the XValueLimit, YValueLimit, HeightLimit and WidthLimit state variables. These variables are placeholders that define the minimum and maximum values. It is assumed that the scanner does not have the capability to sense the sheet size, so no variables are provided to show that information. The *image area* is defined by the origin of an image and its size. Table 14: Sheet and Image Area Dimensions shows the relationships of the X and Y offset values and the width and height of the image. The image area must fit within the limits of the sheet size. If it does not, then the image area will be clipped to fit.

Table 14: Sheet and Image Area Dimensions

| Value Name | Relationships | Description |
|----------------|---|---|
| MaxXValue | XValueLimit | The maximum value of the XValueLimit variable |
| MinXValue | XValueLimit | The minimum value of the XValueLimit variable |
| MaxYValue | YValueLimit | The maximum value of the YValueLimit variable |
| MinYValue | YValueLimit | The minimum value of the YValueLimit variable |
| MaxImageWidth | WidthLimit | The maximum value of the WidthLimit variable. |
| MinImageWidth | WidthLimit | The minimum value of the WidthLimit variable. |
| MaxImageHeight | HeightLimit | The maximum value of the HeightLimit variable. |
| MinImageHeight | HeightLimit | The minimum value of the HeightLimit variable |
| ImageXOffset | MinXValue | Defines the X offset of the leading-left corner of the image area shown in Figure 1. This value must meet the following constraints: $\text{MinXValue} \leq \text{ImageXOffset}$ |
| ImageYOffset | MinYValue | Defines the Y offset of the leading-left corner of the image area shown in Figure 1. This value must meet the following constraints: $\text{MinYValue} \leq \text{ImageYOffset}$ |
| ImageWidth | MaxImageWidth, MinImageWidth, MaxXValue, ImageXOffset | Defines the width of the image area shown in Figure 1. This value must meet the following constraints: $\text{ImageWidth} \geq \text{MinImageWidth}$ $\text{ImageWidth} \leq \text{MaxImageWidth}$ $\text{ImageWidth} \leq \text{MaxXValue} - \text{ImageXOffset}$ |
| ImageHeight | MaxImageHeight, MinImageHeight, MaxYValue, ImageYOffset | Defines the height of the image area shown in Figure 1. This value must meet the following constraints: $\text{ImageHeight} \geq \text{MinImageHeight}$ $\text{ImageHeight} \leq \text{MaxImageHeight}$ $\text{ImageHeight} \leq \text{MaxYValue} - \text{ImageYOffset}$ |

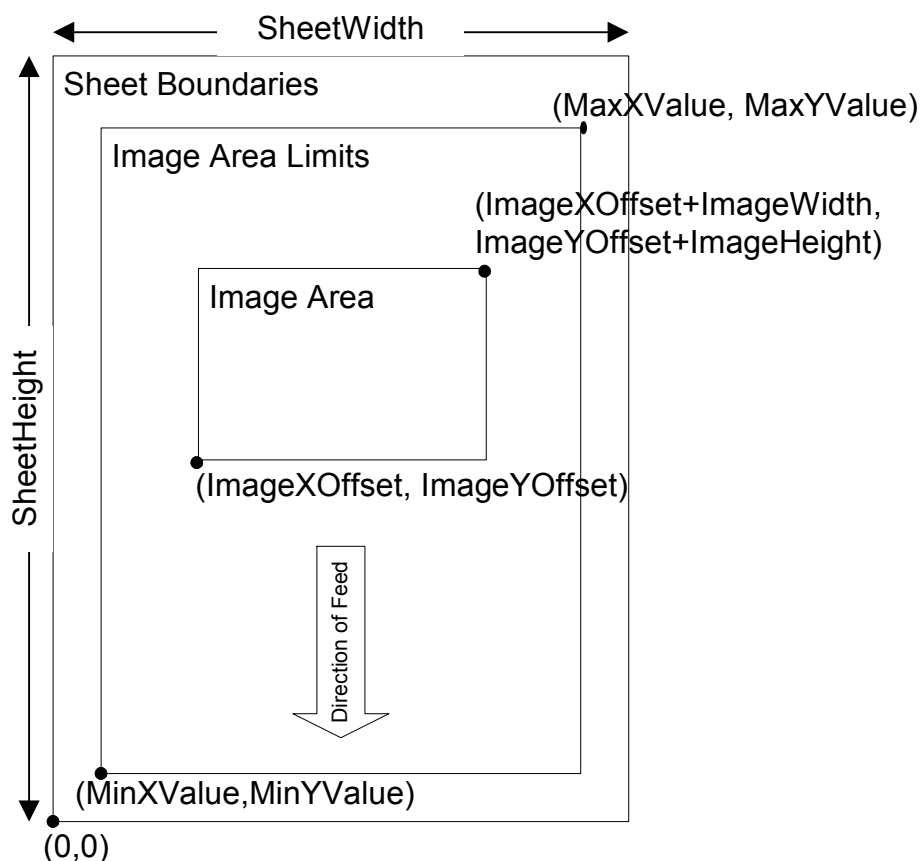


Figure 1: Sheet and Image Areas Illustrated

2.5.2 Flow Example: Feeder-less, Button-less Scan Operation with Pull Image Transfer

The scenario represented in this section involves a scanner without a feeder that is used by a UCP that will pull the images when they are available. The state transition diagram shown in

Figure 2 below describes the operation of the Scan Service. A client should follow the flow of events below to perform a scan:

- 1) The UCP should subscribe with the Scan Service for events.
- 2) The client starts a scanner operation using the StartScan action with bUseFeeder=false (0), SideCount=1, and BaseName="buffer". All of the parameters will be validated before any settings are changed. If all are valid, then the values are set and the scan operation begins. The order of validation is vendor specific. The state value will change from Idle to Pending (possibly going through the NotReady state in the process).
- 3) Once the scanner is in Pending state, it will immediately transition to *Scanning* state because UseFeeder is false(0) and SideCount=1.
- 4) The scanner will generate the *Destination* value and increment the DestinationID value (which will cause an event) and start scanning the first sheet. The UCP should perform a GetDestination action to get the URL for the image and an HTTP/GET operation from the URL to transfer the image. The transfer will probably be chunked (HTTP v1.1). When the sheet is done, the scanner will decrement SideCount, increment SideNumber and transition to Pending because SideCount==0.
- 5) The UCP should send a Stop action to complete the scan. This will cause the scanner to transition to *Finishing*.
- 6) When the state gets to *Finishing*, it will complete any pending transfers and then transition to *Idle*.

- 7) If the state gets to *Erred*, then the UCP must execute the *Abort* action to clear the error and get back to *Idle* state.
- 8) When the state enters the *Idle* state, all configurations settings will be set to their default values.

2.5.3 Flow Example: Feeder-less Scan Operation with Pull Image Transfer

The scenario represented in this section involves a scanner without a feeder that is used by a UCP that will pull the images when they are available. The state transition diagram shown in Figure 2 below describes the operation of the Scan Service. A client should follow the flow of events below to perform a scan:

- 1) The UCP should subscribe with the Scanner and ExternalActivity services for events.
- 2) The client starts a scanner operation using the StartScan action with bUseFeeder=false (0), SideCount=0, and BaseName="buffer". All of the parameters will be validated before any settings are changed. If all are valid, then the values are set and the scan operation begins. The order of validation is vendor specific. The state value will change from Idle to Pending (possibly going through the NotReady state in the process).
- 3) Once the scanner is in Pending state, the user should place a document in the scanner and press the button. The button press will be evented to the UCP by the ExternalActivity service. The UCP should scan one sheet using a Start action with bUseFeeder=false(0) and SideCount=1. Since UseFeeder is false (0) and SideCount=1, the scanner will transition to Scanning state.
- 4) The scanner will generate the *Destination* value and increment the DestinationID value (which will cause an event) and start scanning the first sheet. The UCP should perform a GetDestination action to get the URL for the image and an HTTP/GET operation from the URL to transfer the image. The transfer will probably be chunked (HTTP v1.1). When the sheet is done, the scanner will decrement SideCount, increment SideNumber and transition to Pending because SideCount==0.
- 5) If there are more documents to scan, then repeat steps 3 and 4 for each sheet. When there are no more sheets to scan, the UCP should send a Stop action. This will cause the scanner to transition to Finishing.
- 6) When the state gets to *Finishing*, it will complete any pending transfers and then transition to *Idle*.
- 7) If the state gets to *Erred*, then the UCP must execute the *Abort* action to clear the error and get back to *Idle* state.
- 8) When the state enters the *Idle* state, all configurations settings will be set to their default values.

2.5.4 Flow Example: Feeder-less Scan Operation with Push Image Transfer

The scenario represented in this section involves a scanner without a feeder that is used by a UCP that will push the images to a given destination when they are available. The state transition diagram shown in Figure 2 below describes the operation of the Scan Service. A client should follow the flow of events below to perform a scan:

- 1) The UCP should subscribe with the Scanner and ExternalActivity services for events.
- 2) The client starts a scanner operation using the StartScan action with bUseFeeder=false (0), SideCount=0, and BaseName="machine:port/path" (i.e. a URL), AppendSheetNumber=true (1). All of the parameters will be validated before any settings are changed. If all are valid, then the values are set and the scan operation begins. The order of validation is vendor specific. The state value will change from Idle to Pending (possibly going through the NotReady state in the process).
- 3) Once the scanner is in Pending state, the user should place a document in the scanner and press the button. The button press will be evented to the UCP by the ExternalActivity service. The UCP should scan one sheet using a Start action with bUseFeeder=false(0) and SideCount=1. Since UseFeeder is false (0) and SideCount=1, the scanner will transition to Scanning state.
- 4) The scanner will generate the *Destination* value and increment the DestinationID value (which will cause an event) and start scanning the first sheet. The destination given by the UCP should be prepared to receive an image. The scanner will perform an HTTP/POST operation to the URL given in the *Destination* variable.

The transfer will probably be chunked (HTTP v1.1). When the sheet is done, the scanner will decrement SideCount, increment SideNumber and transition to Pending because SideCount==0.

- 5) If there are more documents to scan, then repeat steps 3 and 4 for each sheet. When there are no more sheets to scan, the UCP should send a Stop action. This will cause the scanner to transition to Finishing.
- 6) When the state gets to *Finishing*, it will complete any pending transfers and then transition to *Idle*.
- 7) If the state gets to *Erred*, then the UCP must execute the *Abort* action to clear the error and get back to *Idle* state.
- 8) When the state enters the *Idle* state, all configurations settings will be set to their default values.

2.5.5 Flow Example: Scan Operation with Feeder and Pull Image Transfer

The Scan Service is used to operate a scanner device. A scanner device is used to convert a user-supplied document into a digital image. The following example shows a scenario where a scanner with a feeder is used to scan multiple pages. The UCP initiates the scan with UseFeeder set to true (1) and pulls all of the image data from the scanner. The state transition diagram shown in

Figure 2 below describes the basic operation of the Scan Service. A client should follow the flow of events below to perform a pull scan:

- 1) The UCP should subscribe with the Scan Service for events.
- 2) Assuming that there are documents in the feeder, the client starts a scanner operation using the StartScan action with bUseFeeder=true (1), SideCount > 0, BaseName="buffer". All of the parameters will be validated before any settings are changed. If all are valid, then the values are set and the scan operation begins. The order of validation is vendor specific. The state value will change from Idle to Pending (possibly going through the NotReady state in the process).
- 3) Once the scanner is in Pending state, it will immediately transition to *Scanning* state and execute Feeder.Load() because UseFeeder is true, Feeder.MorePages is true, and SideCount is non-zero.
- 4) The scanner will generate the *Destination* value and increment the DestinationID value (which will cause an event) and start scanning the first sheet. The UCP should execute the GetDestination action to get the Destination URL value and an HTTP/GET operation on the URL to transfer the image. The transfer will probably be chunked (HTTP v1.1). When the sheet is done, the scanner will decrement SideCount, increment SideNumber, and do one of the following:
 - a) remain in Scanning state (i.e. Repeat Step 4) if Feeder.MorePages is true (1), and SideCount != 0
 - b) OR transition to Pending state if:
 - i) Feeder.MorePages is false (0)
 - ii) OR SideCount == 0
- 5) When the state transitions to Pending, the scanner will:
 - a) transition immediately to *Finishing* if Feeder.MorePages is false(0)
 - b) wait in *Pending* state if Feeder.MorePages is true(1) until:
 - i) a Start action is received that sets SideCount > 0 → transition to Scanning
 - ii) a Stop action is received → transition to Finishing
 - iii) the timeout elapses → transition to Finishing
- 6) When the state gets to *Finishing*, it will complete any pending transfers and then transition to *Idle*.
- 7) If the state gets to *Erred*, then the UCP must execute the *Abort* action to clear the error and get back to *Idle* state.
- 8) When the state enters the *Idle* state, all configurations settings will be set to their default values.

2.5.6 Flow Example: Scan Operation with Feeder and Push Image Transfer

The scenario represented in this section involves a scanner with a feeder that is used by a UCP that wants the images sent when they are available. The state transition diagram shown in

Figure 2 below describes the operation of the Scan Service. A client should follow the flow of events below to perform a scan:

- 1) The UCP should subscribe with the Scan Service for events.
- 2) The client starts a scanner operation using the StartScan action with bUseFeeder=true (1), SideCount > 0, and BaseName="machine:port/path" (i.e. a URL), AppendSheetNumber=true(1). All of the parameters will be validated before any settings are changed. If all are valid, then the values are set and the scan operation begins. The order of validation is vendor specific. The state value will change from Idle to Pending (possibly going through the NotReady state in the process).
- 3) Once the scanner is in Pending state, it will immediately transition to *Scanning* state and execute Feeder.Load() because UseFeeder is true, Feeder.MorePages is true, and SideCount is non-zero.
- 4) The scanner will generate the *Destination* value and increment the DestinationID value (which will cause an event) and start scanning the first sheet. The UCP should be prepared to receive an image. The scanner will perform an HTTP/POST operation to the URL given in the *Destination* variable. The transfer will probably be chunked (HTTP v1.1). When the sheet is done, the scanner will decrement SideCount, increment SideNumber and do one of the following:
 - a) remain in Scanning state (i.e. Repeat Step 4) if Feeder.MorePages is true (1), and SideCount != 0
 - b) OR transition to Pending state if:
 - i) Feeder.MorePages is false (0)
 - ii) OR SideCount == 0
- 5) When the state transitions to Pending, the scanner will:
 - a) transition immediately to *Finishing* if Feeder.MorePages is false(0)
 - b) wait in *Pending* state if Feeder.MorePages is true(1) until:
 - i) a Start action is received that sets SideCount > 0 → transition to Scanning
 - ii) a Stop action is received → transition to Finishing
 - iii) the timeout elapses → transition to Finishing
- 6) When the state gets to *Finishing*, it will complete any pending transfers and then transition to *Idle*.
- 7) If the state gets to *Erred*, then the UCP must execute the *Abort* action to clear the error and get back to *Idle* state.
- 8) When the state enters the *Idle* state, all configurations settings will be set to their default values.

2.5.7 Scanner Timeouts and Feeder Interactions

There are two defined timeouts for scanning operations. These are:

1. NotReady state Timeout (ErredTimeout variable) – the maximum time that the scanner can spend in the NotReady state.
2. General Timeout (Timeout variable) – the maximum time that the scanner can spend in the Scanning state and/or the Pending state without leaving the Pending state (i.e. starting a new sheet). The general timeout also limits the lifetime of a RegID value while the state is *Idle*.

2.5.7.1 Error Timeout

The error timeout occurs when the scanner spends too much time (more than ErrorTimeout seconds) in the NotReady, Erred, or Finishing state. When this occurs, the FailureCode variable will be set to Error Timeout Reached and the state will be set from NotReady or Finishing to *Erred* or from *Erred* to *Idle*.

2.5.7.2 General Timeout

The general timeout value is applied to both a *Registration Timeout* and an *Inner-Page Timeout*. The *Registration Timeout* occurs when an external entity has set the Registration ID value, and the client does not execute a valid *StartScan* action before *Timeout* seconds elapse. An *Inner-Page Timeout* occurs when *Timeout* seconds have elapsed while the scanner has been in any single state except for *Idle* or *Erred*. This can occur for several reasons, including:

- The scanner was unable to transfer the image data to the client (push model)
- The client did not retrieve the image data (pull model)
- The client did not start a scan on the next available sheet

In the first two cases, any remaining data will be flushed from the buffer, the scan operation (if currently active) will be aborted, if *UseFeeder* is true then the sheet will be ejected, the error code will be set to Timeout Reached (720), and the state will be set to *Erred*. In the third case, the state will be set to *Finishing* which will end the scan operation.

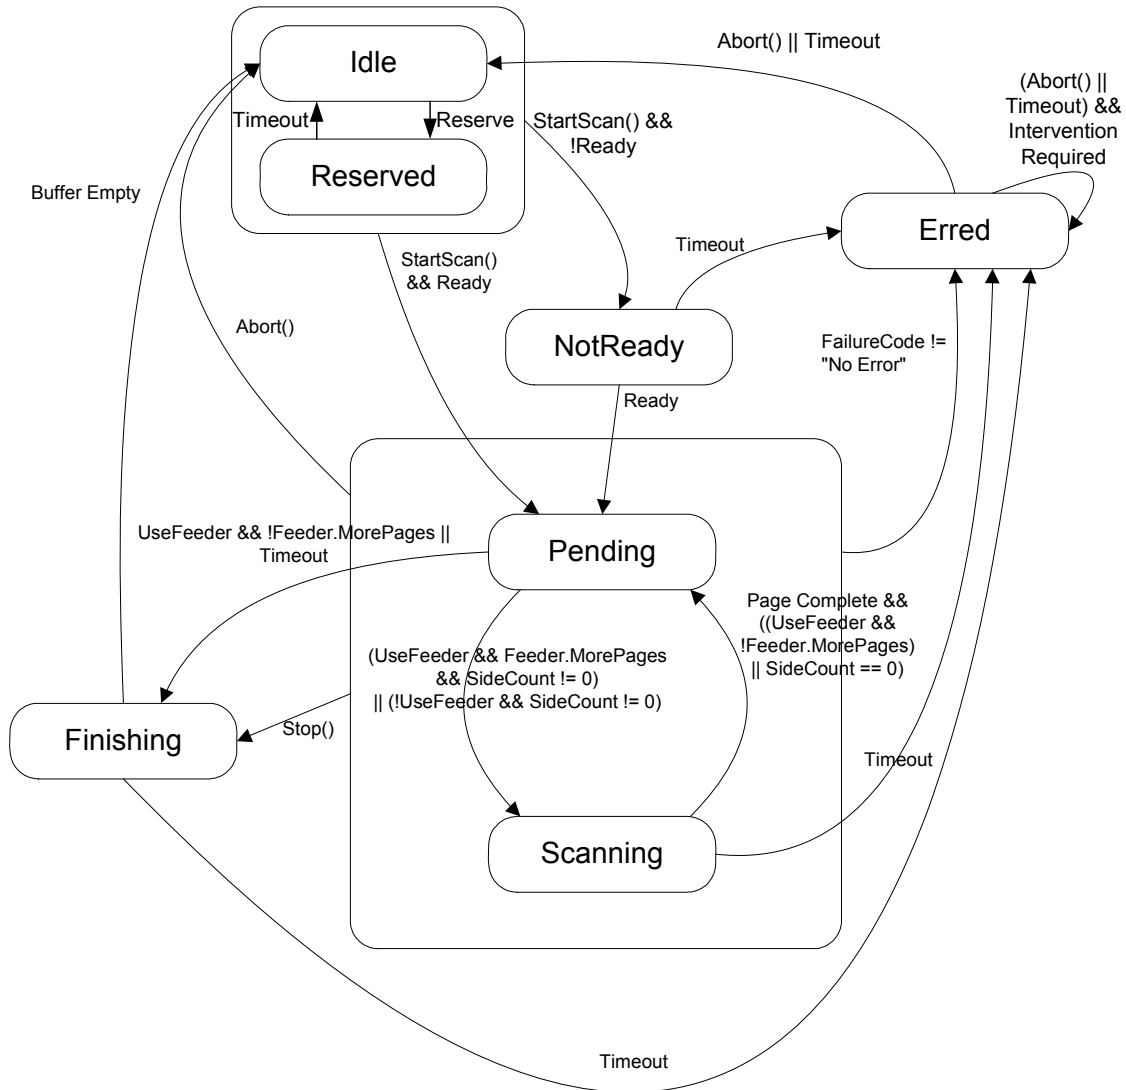


Figure 2 - Scanner State Transition Diagram

Table 15: Scanner State Transition Table

| Current State | Actions and Conditions | | |
|---------------|---|---------------------------------------|------------|
| Idle | On Entry | | |
| | Reset all variables to default values | | |
| | On Exit | | |
| | Condition | Action | Next State |
| | StartScan() && Ready | | Pending |
| | StartScan() && !Ready | | NotReady |
| | Reservation from ExternalActivity | | Reserved |
| | Otherwise remain in Idle state | | |
| Reserved | On Entry | | |
| | On Exit | | |
| | Condition | Action | Next State |
| | StartScan() && RegID match && Ready | | Pending |
| | StartScan() && RegID match && !Ready | | NotReady |
| | Timeout | | Idle |
| | Otherwise remain in Reserved state | | |
| NotReady | On Entry | | |
| | Vendor Unique NotReady processing | | |
| | On Exit | | |
| | Condition | Action | Next State |
| | Ready | | Pending |
| | ErredTimeout | | Erred |
| | Otherwise remain in NotReady state | | |
| Pending | On Entry | | |
| | On Exit | | |
| | Condition | Action | Next State |
| | Start() | Set SideCount and UseFeeder variables | Pending |
| | UseFeeder = true (1) && SideCount != 0 && Feeder.MorePages = true | | Scanning |
| | UseFeeder = false (0) && SideCount != 0 | ¹ SideCount = SideCount | Scanning |
| | Timeout (UseFeeder = true (1) && Feeder.MorePages = false) Stop() | | Finishing |
| | Otherwise remain in Pending state – this implies that if the SideCount is 0, and there are more pages in the feeder then remain in Pending state. | | |

¹ An infinite loop will occur if UseFeeder is false and SideCount is –1. Changing SideCount to the absolute value of SideCount will avoid this condition.

| Current State | Actions and Conditions | | |
|---------------|---|---------------------|------------|
| Scanning | On Entry Reset Timeout and ScanLength, increment DestinationID and SideNumber, generate a new Destination value, Scan an image and decrement SideCount | | |
| | On Exit | | |
| | Condition | Action | Next State |
| | SideCount == 0 UseFeeder = true && Feeder.MorePages = false | | Pending |
| | Stop() | Stop at end of page | Finishing |
| | Timeout | | Erred |
| | Otherwise remain in Scanning state (i.e. execute the OnEntry actions again) – this implies that the scanner will repeatedly scan sheets until the SideCount is 0 or there are no pages in the feeder. | | |
| Finishing | On Entry Finish data transfers | | |
| | On Exit | | |
| | Condition | Action | Next State |
| | always | | Idle |
| Erred | On Entry Abort Scanning, Set FailureCode variable | | |
| | On Exit | | |
| | Condition | Action | Next State |
| | (Abort() Timeout) && Intervention Required | | Erred |
| | Abort() Timeout | Clear FailureCode | Idle |
| | Otherwise remain in Erred state | | |

Table 16: Current State vs Service Actions

| Current State | Service Actions | | | | |
|---------------|-------------------------------|----------------------|------------------------|-------------------|----------------------|
| | StartScan | Start | Stop | Abort | SetConfiguration |
| Idle | Start a scan | Return Invalid_State | Ignored | Ignored | Return Invalid_State |
| Reserved | Start a scan if RegID matches | Return Invalid_State | Ignored | Ignored | Return Invalid_State |
| Pending | Return Invalid_State | Continue a scan | Next State = Finishing | Next State = Idle | Set a configuration |
| Scanning | | Return Invalid_State | Ignored | | Return Invalid_State |
| Finishing | | | Return Invalid_State | | |
| NotReady | | | | | |
| Erred | | | | | |

2.5.8 Scanner Buffer Functionality

The Scan Service model assumes the presence of a data buffer. The operating characteristics of this buffer are as follows:

- The buffer behaves as a FIFO (First-In, First-Out) queue
- Information in the buffer can be unnamed (used in the case where the data is pushed directly to a client supplied URL), or it can be named (used in the case where the client will pull the data from the buffer using an HTTP/GET method)
- Once data is removed from the buffer, it is gone. There is no persistence of the data in the buffer.
- The size of the buffer is unspecified.

The client does not directly interact with the buffer. It specifies the data transfer method by setting the *BaseName* variable. If the *BaseName* value is set to “buffer”, then the data will be named and the client must *pull* the data from the buffer. The evented *Destination* variable will contain the URL of the buffer. If the *BaseName* is given a URL, then the data will be pushed through the buffer to the given *data-sink* URL.

2.5.9 Using XHTML-Print To Send An Image Directly To A Printer

One of the base use cases for UPnP Scanning is *Scan to Printer*. This operation requires that the scanner send image and XHTML-Print information to control the printing. *Scan-to-Printer* assumes that a third party acts as a control point for both the Printer and the Scanner services. This third party, which could be within the scanner device, would send a *CreateJob* action to the printer and receive a data-sink URL in return. The third party would then send a *StartScan* action containing the data-sink URL to the scanner to begin the scan. The scanner would begin the scan operation and send the print job data to the printer data-sink URL.

The *ImageFormat* variable must be *application/vnd.pwg-xhtml-print* to send images directly to a printer. In this case, the information sent to the Printer data-sink URL must contain an XHTML-Print document and embedded JPEG images interleaved using an application/multiplexed transfer described in the document found at <http://search.ietf.org/internet-drafts/draft-herriot-application-multiplexed-04.txt>. The first message of the multiplexed transfer must contain the beginning of an XHTML-Print job stream. The stream must include an object tag for each scanned image. Immediately after the object tag, the current chunk of the mime transfer would end, and a JPEG image, corresponding to the object tag, would follow in one or more chunks. When the JPEG image has been successfully transferred, a new mime chunk, containing the continuing XHTML-Print document, is started. If there is another image to scan, then the new mime chunk contains another object tag. This object tag will be followed by more chunks containing another JPEG Image. This will reoccur for each sheet scanned. When there are no further sheets to be scanned, a final chunk will be sent, which contains the necessary XHTML-Print to complete the print job. See Scan to Print using Multipart MIME on page 52 for a sample document.

2.5.10 BaseName, SideNumber, AppendSideNumber and Destination

The value of the *Destination* state variable is generated by the Scan Service based on the values of the *BaseName*, *SideNumber*, and *AppendSideNumber* variables. The table below defines how these values work together to define the *Destination* value.

Table 17: Destination Names

| BaseName | Side Number | Append Side Number | Destination | Description |
|-------------------------|-------------|--------------------|--|--|
| pull-relative | n/a | False | Image.jpg – where <i>Image</i> is a name generated by the Scan Service. This URL is relative to the BaseURL given in the Device Description Document | Client pull transfer from buffer |
| pull-relative | nn | True | Imagenn.jpg – <i>Image</i> is a name generated by the Scan Service. This URL is relative to the BaseURL given in the Device Description Document | Client pull transfer from numbered files in the buffer |
| pull-absolute | n/a | False | /hostname:port/path/Image.jpg – where <i>Image</i> is a name generated by the Scan Service and /hostname:port/path/ are equivalent to the BaseURL given in the Device Description Document | Client pull transfer from buffer |
| pull-absolute | nn | True | /hostname:port/path/Imagenn.jpg – where <i>Image</i> is a name generated by the Scan Service and /hostname:port/path/ are equivalent to the BaseURL given in the Device Description Document | Client pull transfer from numbered files in the buffer |
| client.xxx.com/filename | n/a | False | client.xxx.com/filename.xxx | Post to the client supplied URL. See Table 1.2 for details of the filename suffix. |
| client.xxx.com/filename | nn | True | client.xxx.com/filenamenn.xxx | Post to the client supplied URL. <i>nn</i> is the current value of SideNumber. See Table 1.2 for details of the filename suffix. |

2.5.11 Relationship between the Scan Service and the Feeder Service

The Scan Service and the Feeder service were separated to try to keep the complexity of the feeder out of the scan functionality. As a result, the scanner really does not know much about a feeder. It just knows whether it has another page (Feeder.MorePages) and how to Load(), Eject() and Reset() a feeder. The scanner does not know where the feeder gets its next page, or where the pages go when they are ejected, nor does it matter. If a more complex interaction is needed, then the vendor should consider enhancing the feeder or scanner services.

2.5.12 Relationship between the Scan Service and the ExternalActivity Service

The ExternalActivity service is used to represent a user accessible control panel. Two (2) Use-Models can be implemented using interactions between the ExternalActivity service and the Scan Service. The *ExternalActivity Initiated, or Push, model* is used when the user starts the scanner interaction by pressing a button represented in the ExternalActivity service. The *Control Point Initiated, or Pull, model* is used when the control point starts a scan operation and then waits for an ExternalActivity notification to continue it.

2.5.12.1 ExternalActivity Initiated “Push” Operating Model

In this use-model, the user walks up to the scanner, places a document to be scanned into the feeder, or onto the glass, and presses a button associated with the scanner. The ExternalActivity service then sets the required RegistrationID value using an unspecified internal mechanism and sends out a standard UPnP event notification on the Activity variable value. When the EA service sets the RegistrationID value the scanner state is set to *Reserved*. This makes the Scan Service available for exclusive use by a control point that possesses the same RegistrationID value. The reservation lasts until a StartScan action is received with the required RegistrationID value or until a Timeout occurs. If a timeout occurs, then the required RegistrationID value will be set back to 0 and the scanner state is set to Idle.

2.5.12.2 Control Point Initiated “Pull” Operating Model

In this use model the user starts at a control point that “reserves” the scanner by sending a *StartScan* action with its RegistrationID value, UseFeeder=false and SideCount=0. This action starts a scan operation that will stop in the pending state and wait for something to happen. This action will work if the current registrationID value is 0 and the state is Idle. When these steps occur, the Scan Service will set the current RegistrationID value in the ExternalActivity service to the given value using an unspecified internal mechanism.

Once the Scanner is successfully “reserved”, the user may walk to the scanner and place the document in it (either in a feeder or on the glass) and press the button associated with the ExternalActivity service. This button press causes a UPnP event notification for the Activity state variable. The control point must recognize this notification and send an appropriate *Start* action, with the JobID returned by the StartScan action, to continue the scanning operation.

Abort Handling
The Abort action is used to immediately terminate an active scan operation. All transfers are immediately terminated. All Scanning is stopped immediately. If there is a page in the scanner, and the UseFeeder variable is true (1), then the page will be ejected unless the current FailureCode is “Jammed”.

2.5.13 Extending Scanner Functionality

The Scan Service is not intended to be an all-encompassing template. It does not perform all of the high-level functionality that the committee members could think of. Instead, it performs a simple scan operation and enables some extended features through interaction with a client. Multi-pass scans are possible by using the *Start* action one page at a time. Extended feeders can be used without changing the scanner functionality. Both push (the scanner sends images to a client) and pull (the client gets the images from the scanner) models are supported. No specific buffer size is required. All of these functions can be extended by a vendor if they wish. The additional functionality must be properly described in the *Service Control Protocol Document* and it cannot modify the defined standard actions and state variables.

3 XML Service Template for Scan:1.0

The XML document below is a sample *Service Control Protocol Document* (SCPD) for a scanner device. It should be modified as needed by a scanner vendor to fully describe the Scan Service offered by the scanner device. The scanner device should make the modified document available at the SCPD URL given in the device descriptor. A client will perform an HTTP/GET operation on that URL to get the document. NOTE: The XML comments in this section are for information only and should be omitted in the SCPD.

```
<?xml version="1.0"?>
<scpd xmlns="urn:schemas-upnp-org:service-1-0">
  <specVersion>
    <major>1</major>
    <minor>0</minor>
  </specVersion>
  <actionList>
    <action>
      <name>StartScan</name>
      <argumentList>
        <argument>
          <name>RegistrationIDIn</name>
          <relatedStateVariable>RegistrationID</relatedStateVariable>
          <direction>in</direction>
        </argument>
        <argument>
          <name>UseFeederIn</name>
          <relatedStateVariable>UseFeeder</relatedStateVariable>
          <direction>in</direction>
        </argument>
        <argument>
          <name>SideCountIn</name>
          <relatedStateVariable>SideCount</relatedStateVariable>
          <direction>in</direction>
        </argument>
        <argument>
          <name>JobNameIn</name>
          <relatedStateVariable>JobName</relatedStateVariable>
          <direction>in</direction>
        </argument>
        <argument>
          <name>ResolutionIn</name>
          <relatedStateVariable>Resolution</relatedStateVariable>
          <direction>in</direction>
        </argument>
        <argument>
          <name>ImageXOffsetIn</name>
          <relatedStateVariable>XValueLimit</relatedStateVariable>
          <direction>in</direction>
        </argument>
        <argument>
          <name>ImageYOffsetIn</name>
          <relatedStateVariable>YValueLimit</relatedStateVariable>
          <direction>in</direction>
        </argument>
        <argument>
          <name>ImageWidthIn</name>
          <relatedStateVariable>WidthLimit</relatedStateVariable>
          <direction>in</direction>
        </argument>
        <argument>
          <name>ImageHeightIn</name>
          <relatedStateVariable>HeightLimit</relatedStateVariable>
          <direction>in</direction>
        </argument>
      </argumentList>
    </action>
  </actionList>
</scpd>
```

```

<argument>
  <name>ImageFormatIn</name>
  <relatedStateVariable>ImageFormat</relatedStateVariable>
  <direction>in</direction>
</argument>
<argument>
  <name>CompressionFactorIn</name>
  <relatedStateVariable>CompressionFactor</relatedStateVariable>
  <direction>in</direction>
</argument>
<argument>
  <name>ImageTypeIn</name>
  <relatedStateVariable>ImageType</relatedStateVariable>
  <direction>in</direction>
</argument>
<argument>
  <name>ColorTypeIn</name>
  <relatedStateVariable>ColorType</relatedStateVariable>
  <direction>in</direction>
</argument>
<argument>
  <name>BitDepthIn</name>
  <relatedStateVariable>BitDepth</relatedStateVariable>
  <direction>in</direction>
</argument>
<argument>
  <name>ColorSpaceIn</name>
  <relatedStateVariable>ColorSpace</relatedStateVariable>
  <direction>in</direction>
</argument>
<argument>
  <name>BaseNameIn</name>
  <relatedStateVariable>BaseName</relatedStateVariable>
  <direction>in</direction>
</argument>
<argument>
  <name>AppendSideNumberIn</name>
  <relatedStateVariable>AppendSideNumber</relatedStateVariable>
  <direction>in</direction>
</argument>
<argument>
  <name>TimeoutIn</name>
  <relatedStateVariable>Timeout</relatedStateVariable>
  <direction>in</direction>
</argument>
<argument>
  <name>ActualTimeoutOut</name>
  <relatedStateVariable>Timeout</relatedStateVariable>
  <direction>out</direction>
</argument>
<argument>
  <name>JobIDOut</name>
  <relatedStateVariable>JobID</relatedStateVariable>
  <direction>out</direction>
</argument>
<argument>
  <name>ActualWidthOut</name>
  <relatedStateVariable>WidthLimit</relatedStateVariable>
  <direction>out</direction>
</argument>
<argument>
  <name>ActualHeightOut</name>
  <relatedStateVariable>HeightLimit</relatedStateVariable>
  <direction>out</direction>

```

```

    </argument>
  </argumentList>
</action>
<action>
  <name>Start</name>
  <argumentList>
    <argument>
      <name>JobIDIn</name>
      <relatedStateVariable>JobID</relatedStateVariable>
      <direction>in</direction>
    </argument>
    <argument>
      <name>UseFeederIn</name>
      <relatedStateVariable>UseFeeder</relatedStateVariable>
      <direction>in</direction>
    </argument>
    <argument>
      <name>SideCountIn</name>
      <relatedStateVariable>SideCount</relatedStateVariable>
      <direction>in</direction>
    </argument>
  </argumentList>
</action>
<action>
  <name>Stop</name>
  <argumentList>
    <argument>
      <name>JobIDIn</name>
      <relatedStateVariable>JobID</relatedStateVariable>
      <direction>in</direction>
    </argument>
  </argumentList>
</action>
<action>
  <name>Abort</name>
  <argumentList>
    <argument>
      <name>JobIDIn</name>
      <relatedStateVariable>JobID</relatedStateVariable>
      <direction>in</direction>
    </argument>
  </argumentList>
</action>
<action>
  <name>SetConfiguration</name>
  <argumentList>
    <argument>
      <name>JobIDIn</name>
      <relatedStateVariable>JobID</relatedStateVariable>
      <direction>in</direction>
    </argument>
    <argument>
      <name>JobNameIn</name>
      <relatedStateVariable>JobName</relatedStateVariable>
      <direction>in</direction>
    </argument>
    <argument>
      <name>ResolutionIn</name>
      <relatedStateVariable>Resolution</relatedStateVariable>
      <direction>in</direction>
    </argument>
    <argument>
      <name>ImageXOffsetIn</name>
      <relatedStateVariable>XValueLimit</relatedStateVariable>

```

```

    <direction>in</direction>
  </argument>
  <argument>
    <name>ImageYOffsetIn</name>
    <relatedStateVariable>YValueLimit</relatedStateVariable>
    <direction>in</direction>
  </argument>
  <argument>
    <name>ImageWidthIn</name>
    <relatedStateVariable>WidthLimit</relatedStateVariable>
    <direction>in</direction>
  </argument>
  <argument>
    <name>ImageHeightIn</name>
    <relatedStateVariable>HeightLimit</relatedStateVariable>
    <direction>in</direction>
  </argument>
  <argument>
    <name>ImageFormatIn</name>
    <relatedStateVariable>ImageFormat</relatedStateVariable>
    <direction>in</direction>
  </argument>
  <argument>
    <name>CompressionFactorIn</name>
    <relatedStateVariable>CompressionFactor</relatedStateVariable>
    <direction>in</direction>
  </argument>
  <argument>
    <name>ImageTypeIn</name>
    <relatedStateVariable>ImageType</relatedStateVariable>
    <direction>in</direction>
  </argument>
  <argument>
    <name>ColorTypeIn</name>
    <relatedStateVariable>ColorType</relatedStateVariable>
    <direction>in</direction>
  </argument>
  <argument>
    <name>BitDepthIn</name>
    <relatedStateVariable>BitDepth</relatedStateVariable>
    <direction>in</direction>
  </argument>
  <argument>
    <name>ColorSpaceIn</name>
    <relatedStateVariable>ColorSpace</relatedStateVariable>
    <direction>in</direction>
  </argument>
  <argument>
    <name>BaseNameIn</name>
    <relatedStateVariable>BaseName</relatedStateVariable>
    <direction>in</direction>
  </argument>
  <argument>
    <name>AppendSideNumberIn</name>
    <relatedStateVariable>AppendSideNumber</relatedStateVariable>
    <direction>in</direction>
  </argument>
  <argument>
    <name>TimeoutIn</name>
    <relatedStateVariable>Timeout</relatedStateVariable>
    <direction>in</direction>
  </argument>
  <argument>
    <name>ActualTimeoutOut</name>

```

```

    <relatedStateVariable>Timeout</relatedStateVariable>
    <direction>out</direction>
  </argument>
  <argument>
    <name>ActualWidthOut</name>
    <relatedStateVariable>WidthLimit</relatedStateVariable>
    <direction>out</direction>
  </argument>
  <argument>
    <name>ActualHeightOut</name>
    <relatedStateVariable>HeightLimit</relatedStateVariable>
    <direction>out</direction>
  </argument>
</argumentList>
</action>
<action>
  <name>GetConfiguration</name>
  <argumentList>
    <argument>
      <name>JobNameOut</name>
      <relatedStateVariable>JobName</relatedStateVariable>
      <direction>out</direction>
    </argument>
    <argument>
      <name>ResolutionOut</name>
      <relatedStateVariable>Resolution</relatedStateVariable>
      <direction>out</direction>
    </argument>
    <argument>
      <name>ImageXOffsetOut</name>
      <relatedStateVariable>XValueLimit</relatedStateVariable>
      <direction>out</direction>
    </argument>
    <argument>
      <name>ImageYOffsetOut</name>
      <relatedStateVariable>YValueLimit</relatedStateVariable>
      <direction>out</direction>
    </argument>
    <argument>
      <name>ImageWidthOut</name>
      <relatedStateVariable>WidthLimit</relatedStateVariable>
      <direction>out</direction>
    </argument>
    <argument>
      <name>ImageHeightOut</name>
      <relatedStateVariable>HeightLimit</relatedStateVariable>
      <direction>out</direction>
    </argument>
    <argument>
      <name>ImageFormatOut</name>
      <relatedStateVariable>ImageFormat</relatedStateVariable>
      <direction>out</direction>
    </argument>
    <argument>
      <name>CompressionFactorOut</name>
      <relatedStateVariable>CompressionFactor</relatedStateVariable>
      <direction>out</direction>
    </argument>
    <argument>
      <name>ImageTypeOut</name>
      <relatedStateVariable>ImageType</relatedStateVariable>
      <direction>out</direction>
    </argument>
  </argumentList>

```

```

    <name>ColorTypeOut</name>
    <relatedStateVariable>ColorType</relatedStateVariable>
    <direction>out</direction>
  </argument>
  <argument>
    <name>BitDepthOut</name>
    <relatedStateVariable>BitDepth</relatedStateVariable>
    <direction>out</direction>
  </argument>
  <argument>
    <name>ColorSpaceOut</name>
    <relatedStateVariable>ColorSpace</relatedStateVariable>
    <direction>out</direction>
  </argument>
  <argument>
    <name>BaseNameOut</name>
    <relatedStateVariable>BaseName</relatedStateVariable>
    <direction>out</direction>
  </argument>
  <argument>
    <name>AppendSideNumberOut</name>
    <relatedStateVariable>AppendSideNumber</relatedStateVariable>
    <direction>out</direction>
  </argument>
  <argument>
    <name>TimeoutOut</name>
    <relatedStateVariable>Timeout</relatedStateVariable>
    <direction>out</direction>
  </argument>
</argumentList>
</action>
<action>
  <name>GetSideInformation</name>
  <argumentList>
    <argument>
      <name>SideNumberOut</name>
      <direction>out</direction>
      <relatedStateVariable>SideNumber</relatedStateVariable>
    </argument>
    <argument>
      <name>SideCountOut</name>
      <direction>out</direction>
      <relatedStateVariable>SideCount</relatedStateVariable>
    </argument>
    <argument>
      <name>ScanLengthOut</name>
      <relatedStateVariable>ScanLength</relatedStateVariable>
      <direction>out</direction>
    </argument>
  </argumentList>
</action>
<action>
  <name>GetDestination</name>
  <argumentList>
    <argument>
      <name>JobIDIn</name>
      <relatedStateVariable>JobID</relatedStateVariable>
      <direction>in</direction>
    </argument>
    <argument>
      <name>DestinationOut</name>
      <relatedStateVariable>Destination</relatedStateVariable>
      <direction>out</direction>
    </argument>
  </argumentList>

```

```

    <argument>
      <name>DestinationIDOut</name>
      <relatedStateVariable>DestinationID</relatedStateVariable>
      <direction>out</direction>
    </argument>
  </argumentList>
</action>
<action>
  <name>GetState</name>
  <argumentList>
    <argument>
      <name>StateOut</name>
      <relatedStateVariable>State</relatedStateVariable>
      <direction>out</direction>
    </argument>
    <argument>
      <name>StateReasonOut</name>
      <relatedStateVariable>StateReason</relatedStateVariable>
      <direction>out</direction>
    </argument>
    <argument>
      <name>FailureCodeOut</name>
      <relatedStateVariable>FailureCode</relatedStateVariable>
      <direction>out</direction>
    </argument>
  </argumentList>
</action>
Declarations for other actions added by UPnP vendor (if any) go here
</actionList>
<serviceStateTable>
  <!-- Optional state variable
  this may be removed if not supported -->
  <stateVariable sendEvents="no">
    <name>JobName</name>
    <dataType>string</dataType>
  </stateVariable>
  <stateVariable sendEvents="yes">
    <name>FailureCode</name>
    <dataType>string</dataType>
    <defaultValue>No Error</defaultValue>
    <allowedValueList>
      <allowedValue>No Error</allowedValue>
      <allowedValue>Jammed</allowedValue>
      <allowedValue>Timeout Reached</allowedValue>
      <allowedValue>ErredTimeout Reached</allowedValue>
      <allowedValue>Destination Not Reachable</allowedValue>
      <!-- Other vendor unique error codes should be added here.
      Warning: These values must be 31 characters or less! -->
      Other allowed values defined by UPnP Forum working committee (if
      any) go here
    </allowedValueList>
  </stateVariable>
  <stateVariable sendEvents="yes">
    <name>State</name>
    <dataType>string</dataType>
    <defaultValue>Idle</defaultValue>
    <allowedValueList>
      <allowedValue>Idle</allowedValue>
      <allowedValue>Reserved</allowedValue>
      <allowedValue>NotReady</allowedValue>
      <allowedValue>Pending</allowedValue>
      <allowedValue>Scanning</allowedValue>
      <allowedValue>Finishing</allowedValue>
      <allowedValue>Erred</allowedValue>

```



```

    </allowedValueList>
  </stateVariable>
  <stateVariable sendEvents="no">
    <name>StateReason</name>
    <dataType>string</dataType>
  </stateVariable>
  <stateVariable sendEvents="no">
    <name>ImageFormat</name>
    <dataType>string</dataType>
    <defaultValue>image/jpeg</defaultValue>
    <allowedValueList>
      <allowedValue>device-setting</allowedValue>
      <allowedValue>image/jpeg</allowedValue>
      <!-- Optional defined values
      <allowedValue>application/vnd.pwg-xhtml-print</allowedValue>
      -->
      <!-- Other allowed values defined by UPnP Forum working
      committee (if any) go here -->
    </allowedValueList>
  </stateVariable>
  <stateVariable sendEvents="no">
    <name>CompressionFactor</name>
    <dataType>i4</dataType>
    <defaultValue>100</defaultValue>
    <allowedValueRange>
      <minimum>-1</minimum>
      <maximum>100</maximum>
      <step>1</step>
    </allowedValueRange>
  </stateVariable>
  <stateVariable sendEvents="no">
    <name>ImageType</name>
    <dataType>string</dataType>
    <defaultValue>Mixed</defaultValue>
    <allowedValueList>
      <allowedValue>device-setting</allowedValue>
      <allowedValue>Mixed</allowedValue>
      <!-- Optional defined values
      <allowedValue>Photo</allowedValue>
      <allowedValue>Text</allowedValue>
      <allowedValue>Graphics</allowedValue>
      -->
    </allowedValueList>
  </stateVariable>
  <stateVariable sendEvents="no">
    <name>ColorType</name>
    <dataType>string</dataType>
    <defaultValue>Color</defaultValue>
    <allowedValueList>
      <allowedValue>device-setting</allowedValue>
      <!-- Optional defined values - Either Color or Mono must be an
      allowed value
      <allowedValue>Color</allowedValue>
      <allowedValue>Mono</allowedValue>
      -->
    </allowedValueList>
  </stateVariable>
  <stateVariable sendEvents="no">
    <name>BitDepth</name>
    <dataType>string</dataType>
    <defaultValue>8</defaultValue>
    <allowedValueList>
      <allowedValue>device-setting</allowedValue>
      <allowedValue>8</allowedValue>

```

```

    <!-- Optional defined values
    <allowedValue>12</allowedValue>
    -->
  </allowedValueList>
</stateVariable>
<stateVariable sendEvents="no">
  <name>ColorSpace</name>
  <dataType>string</dataType>
  <defaultValue>SRGB</defaultValue>
  <allowedValueList>
    <allowedValue>device-setting</allowedValue>
    <allowedValue>SRGB</allowedValue>
    <!-- Vendor defined values may be added here -->
  </allowedValueList>
</stateVariable>
<stateVariable sendEvents="no">
  <name>UseFeeder</name>
  <dataType>string</dataType>
  <defaultValue>0</defaultValue>
  <allowedValueList>
    <allowedValue>device-setting</allowedValue>
    <allowedValue>0</allowedValue>
    <!-- Optional defined value
    <allowedValue>1</allowedValue>
    -->
  </allowedValueList>
</stateVariable>
<stateVariable sendEvents="no">
  <name>BaseName</name>
  <dataType>string</dataType>
  <defaultValue>pull-relative</defaultValue>
</stateVariable>
<stateVariable sendEvents="no">
  <name>AppendSideNumber</name>
  <dataType>string</dataType>
  <defaultValue>0</defaultValue>
  <allowedValueList>
    <allowedValue>device-setting</allowedValue>
    <allowedValue>0</allowedValue>
    <!-- Optional defined value
    <allowedValue>1</allowedValue>
    -->
  </allowedValueList>
</stateVariable>
<stateVariable sendEvents="no">
  <name>SideCount</name>
  <dataType>i4</dataType>
  <defaultValue>0</defaultValue>
  <allowedValueRange>
    <minimum>-1</minimum><!-- -1 means all sheets -->
    <maximum>vendor-defined</maximum><!-- Vendor defined range value -
    ->
    <step>1</step>
  </allowedValueRange>
</stateVariable>
<stateVariable sendEvents="yes">
  <name>SideNumber</name>
  <dataType>i4</dataType>
  <defaultValue>0</defaultValue>
  <allowedValueRange>
    <minimum>0</minimum>
    <maximum>vendor-defined</maximum><!-- Vendor defined range value -
    ->
    <step>1</step>

```

```

    </allowedValueRange>
</stateVariable>
<stateVariable sendEvents="no">
  <name>Destination</name>
  <dataType>string</dataType>
</stateVariable>
<stateVariable sendEvents="no">
  <name>Timeout</name>
  <dataType>i4</dataType>
  <defaultValue>vendor-defined</defaultValue> <!-- Should be the max
    value -->
  <allowedValueRange>
    <minimum>-1</minimum>
    <maximum>vendor-defined</maximum><!-- Vendor defined range value -
      ->
    <step>1</step>
  </allowedValueRange>
</stateVariable>
<stateVariable sendEvents="no">
  <name>ErrorTimeout</name>
  <dataType>i4</dataType>
  <defaultValue>vendor-defined</defaultValue>
</stateVariable>
<stateVariable sendEvents="no">
  <name>Resolution</name>
  <dataType>string</dataType>
  <defaultValue>vendor-defined</defaultValue> <!-- Should be the max
    value -->
  <!--The vendor may have either an allowedValueList or an
    allowedValueRange for the Resolution variable -->
  <allowedValueList>
    <allowedValue>device-setting</allowedValue><!--The vendor may add
      values as needed -->
  </allowedValueList>
</stateVariable>
<stateVariable sendEvents="yes">
  <name>ScanLength</name>
  <dataType>i4</dataType>
  <defaultValue>0</defaultValue> <!-- Should be the max value -->
  <allowedValueRange>
    <minimum>0</minimum>
    <maximum>vendor-defined</maximum><!-- Vendor defined range value -
      ->
    <step>1</step>
  </allowedValueRange>
</stateVariable>
<stateVariable sendEvents="no">
  <name>DeviceID</name>
  <dataType>string</dataType>
  <defaultValue>vendor-defined</defaultValue> <!--Vendor unique value-
    ->
</stateVariable>
<stateVariable sendEvents="no">
  <name>HeightLimit</name>
  <dataType>i4</dataType>
  <defaultValue>vendor-defined</defaultValue> <!-- Should be the max
    value -->
  <allowedValueRange>
    <minimum>-1</minimum>
    <maximum>vendor-defined</maximum><!-- Vendor defined range value -
      ->
    <step>1</step>
  </allowedValueRange>
</stateVariable>

```

```

<stateVariable sendEvents="no">
  <name>WidthLimit</name>
  <dataType>i4</dataType>
  <defaultValue>vendor-defined</defaultValue> <!-- Should be the max
    value -->
  <allowedValueRange>
    <minimum>-1</minimum>
    <maximum>vendor-defined</maximum><!-- Vendor defined range value -
      ->
    <step>1</step>
  </allowedValueRange>
</stateVariable>
<stateVariable sendEvents="no">
  <name>XValueLimit</name>
  <dataType>i4</dataType>
  <defaultValue>vendor-defined</defaultValue> <!-- Should be the max
    value -->
  <allowedValueRange>
    <minimum>-1</minimum>
    <maximum>vendor-defined</maximum><!-- Vendor defined range value -
      ->
    <step>1</step>
  </allowedValueRange>
</stateVariable>
<stateVariable sendEvents="no">
  <name>YValueLimit</name>
  <dataType>i4</dataType>
  <defaultValue>vendor-defined</defaultValue> <!-- Should be the max
    value -->
  <allowedValueRange>
    <minimum>-1</minimum>
    <maximum>vendor-defined</maximum><!-- Vendor defined range value -
      ->
    <step>1</step>
  </allowedValueRange>
</stateVariable>
<stateVariable sendEvents="no">
  <name>RegistrationID</name>
  <dataType>ui4</dataType>
</stateVariable>
<stateVariable sendEvents="no">
  <name>JobID</name>
  <dataType>ui4</dataType>
  <allowedValueRange>
    <minimum>1</minimum>
    <maximum>4294967295</maximum>
    <step>1</step>
  </allowedValueRange>
</stateVariable>
<stateVariable sendEvents="yes">
  <name>DestinationID</name>
  <dataType>ui4</dataType>
  <defaultValue>0</defaultValue>
  <allowedValueRange>
    <minimum>0</minimum>
    <maximum>4294967295</maximum><!--max-ui4 value -->
    <step>1</step>
  </allowedValueRange>
</stateVariable>
  Declarations for other state variables added by UPnP vendor (if any)
  go here
</serviceStateTable>
</scpd>

```

4 Testing

4.1 Syntax Testing

4.1.1 Issues

Due to the limited capabilities of the UPnP Certification Tool, only limited syntax testing can be performed at this time. Only actions that can return a successful status using arguments specified at the time the tests are written may be tested. This eliminates any actions that take the JobID as a input argument. This leaves testing of the *StartScan* action.

4.1.2 *StartScan* Syntax Test

TBD

Annex A (informative)

Scan to Print using Multipart MIME

The print document represented below shows how an xhtml-print document with two embedded images would be transferred. This assumes the use of the application/multiplexed MIME type described in “The MIME Application/Multiplexed Content-Type” by Robert Herriot which can be found at <http://search.ietf.org/internet-drafts/draft-herriot-application-multiplexed-00.txt>. Where 00 is the initial revision. Later copies will have an incremented value. This MIME type defines a *chunk header* “CHK x y b” where *x* is the message identifier, *y* is the number of bytes in the chunk, and *b* is a boolean flag that indicates that there are more (Y) chunks or not (N).

```
Content-type: application/multiplexed;
type="text/xhtml-print+xml;
```

```
CHK 1 500 Y
Content-ID <12345.23456xxx@foo.com>
Content-type: text/xhtml-print+xml;charset="utf8"
```

```
<?xml version="1.0"?>
<!DOCTYPE html PUBLIC "-//W3C//DTD XHTML 1.0 Strict//EN"
"http://www.w3.org/TR/xhtml1/DTD/xhtml1-strict.dtd">
<html xmlns="http://www.w3.org/TR/xhtml1">
  <head>
    <title> Testing Page Breaks </title>
    <style>pagebreak { page-break-after: always }</style>
  </head>
  <body>
    <p>Include an image after this!</p>

    <object declare="declare" height="20 mm" width="20 mm" type="image/jpeg"
      id="image_1.jpeg"></object>
```

```
CHK 2 nnnnnnnn N
Content-Location: image_1.jpeg
Content-id: <97116092511xyz@foo.bar.net>
Content-type: image/jpeg
```

...xyz bytes of jpeg binary ... (in this case the whole image)

```
CHK 1 215 Y
Content-type: text/xhtml-print+xml;charset="utf8"
<p>This shows the inclusion of a second image in the document</p>
```

```
<object declare="declare" height="20 mm" width="20 mm" type="image/jpeg"
  id="image_2.jpeg"></object>
```

```
CHK 3 nnnnnnnn N
Content-Location: image_2.jpeg
Content-id: <97116092511xyz@foo.bar.net>
Content-type: image/jpeg
...xyz bytes of jpeg binary ...
```

```
CHK 1 139 N
Content-type text/xhtml-print+xml;charset="utf8"
<p>This shows the part of the document that comes after the final image.</p>
</body>
</html>
```

```
CHK 0 0 N
```


INTERNATIONAL
ELECTROTECHNICAL
COMMISSION

3, rue de Varembé
PO Box 131
CH-1211 Geneva 20
Switzerland

Tel: + 41 22 919 02 11
Fax: + 41 22 919 03 00
info@iec.ch
www.iec.ch